



ARCTIC CAT[®]

www.ace.ag

400 3in1

STREET LEGAL



2006

Illustrated Parts Manual

TABLE OF CONTENTS

2006 400 3in1


FRONT BODY PANEL ASSEMBLY	1
REAR BODY PANEL ASSEMBLY	2
TAILLIGHT ASSEMBLY	3
DECALS	4
FRAME AND RELATED PARTS	5
SEAT AND BACKREST ASSEMBLY	6
STEERING POST ASSEMBLY	7
HANDLEBAR ASSEMBLY	8
FRONT SUSPENSION ASSEMBLY	9
REAR SUSPENSION ASSEMBLY	10
WHEEL AND TIRE ASSEMBLY	11
AUXILIARY BRAKE ASSEMBLY	12
HYDRAULIC HAND BRAKE ASSEMBLY	13
HYDRAULIC BRAKE ASSEMBLY	14
GAS TANK ASSEMBLY	15
REVERSE SHIFT LEVER ASSEMBLY	16
AIR INTAKE ASSEMBLY	17
BATTERY ASSEMBLY	18
ENGINE AND EXHAUST	19
OIL COOLER ASSEMBLY	20
CASE/BELT COOLING ASSEMBLY	21
FRONT DRIVE GEARCASE ASSEMBLY	22
REAR DRIVE GEARCASE ASSEMBLY	23
WIRING HARNESS ASSEMBLY	24
CARBURETOR	25
CYLINDER HEAD ASSEMBLY	26
CYLINDER ASSEMBLY	27
CRANKCASE ASSEMBLY	28
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY	29
CRANKSHAFT ASSEMBLY	30
STARTER CLUTCH ASSEMBLY	31
CRANK BALANCER ASSEMBLY	32
CAMSHAFT/VALVE ASSEMBLY	33
CAM CHAIN ASSEMBLY	34
RECOIL STARTER ASSEMBLY	35
OIL FILTER/PUMP ASSEMBLY	36
TRANSMISSION ASSEMBLY	37
SECONDARY TRANSMISSION ASSEMBLY	38
SECONDARY DRIVE ASSEMBLY	39
GEAR SHIFTING ASSEMBLY	40
STARTER MOTOR ASSEMBLY	41
MAGNETO ASSEMBLY	42
CONTROL SWITCH HOUSING ASSEMBLY	43
THROTTLE CASE ASSEMBLY	44
RELATED ITEMS	Back Cover

■ NOTE: The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. Underlined part numbers are new for the 2006 model year.

2006 Arctic Cat AG

Printed March 2006


®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701

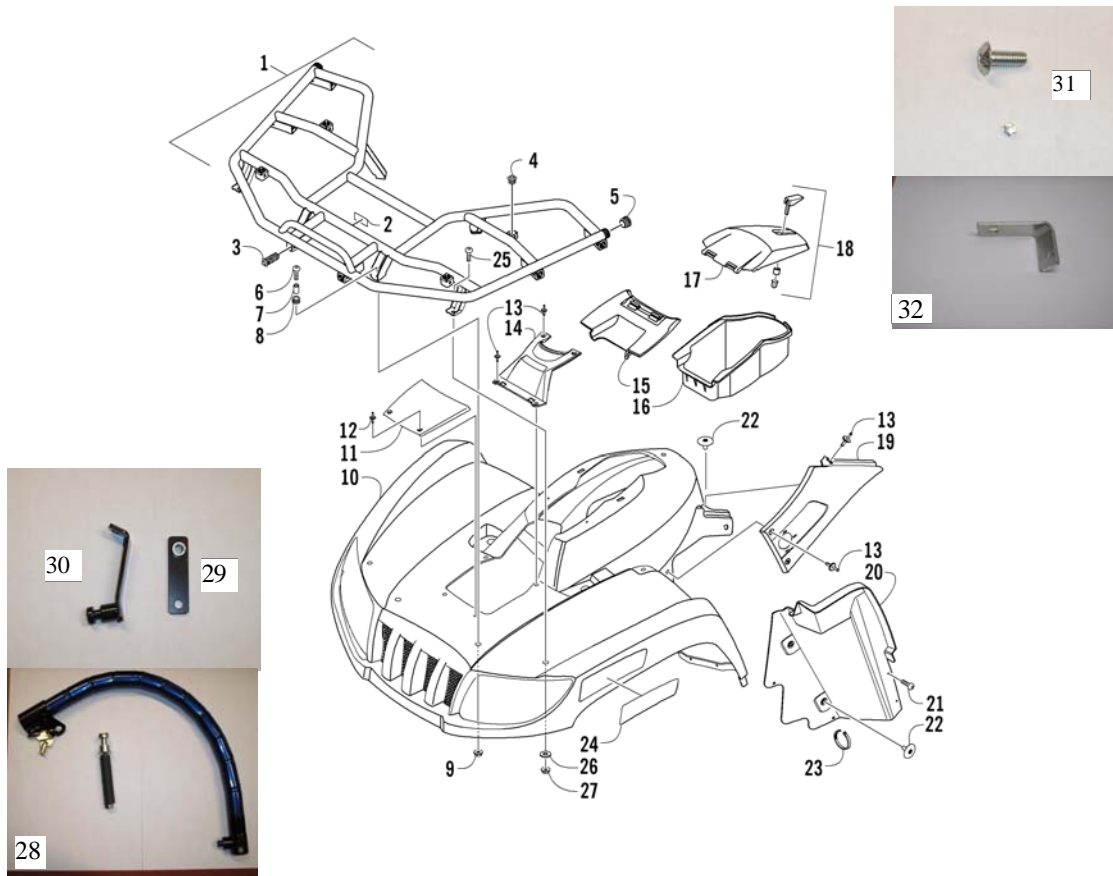

FRONT BODY PANEL ASSEMBLY

0739-662



Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0541-272	1	Rack - Front - Assembly (inc. 2-5)	18	1406-599	1	Latch, Storage Box
2	0411-576	1	∅ Decal, Warning - Front Rack Load	19	1406-313	1	Panel, Side - Right
3	<u>2406-014</u>	6	∅ Bushing, Rack		1406-314	1	Panel, Side - Left
4	0441-592	4	∅ Bushing, Rack	20	1406-354	1	Panel, Splash - Right
5	1441-049	2	∅ Plug, Rack		1406-355	1	Panel, Splash - Left
6	<u>8410-830</u>	4	Screw, Machine	21	0423-342	4	Screw, Self-Tapping
7	0423-463	4	Spacer	22	0423-101	5	Screw, Body
8	0423-465	4	Grommet	23	0123-788	AR	Cable Tie - 7.5 in.
9	8432-802	4	Nut, Lock	24	0411-818	1	Decal, Reflector - Front - Right
10	1406-614	1	Panel, Fender - Front		0411-819	1	Decal, Reflector - Front - Left
	1406-613	1	Panel, Fender - Front (Green)	25	0423-355	2	Screw, Shoulder
	1406-615	1	Panel, Fender - Front (Cat Green)	26	8050-222	2	Washer
11	1406-358	1	Cover, Access	27	8424-602	2	Nut, Lock
12	0423-535	2	Rivet, Reinstallable	28 AC008-790	1	Anti Theft Device	
13	0623-362	10	Rivet, Reinstallable	29 AC008-793	1	Bracket Anti Theft Device	
14	1406-484	1	Cover, Steering Post	30 AC008-792	1	Holder Anti Theft Device	
15	0470-513	1	Cover, Storage Box	31 AC008-795	1	Star Screw	
16	1406-573	1	Box, Storage	32 AC008-011	1	Holder Panel Left	
17	0470-514	1	Lid, Storage Box	AC008-012	1	Holder Panel Right	

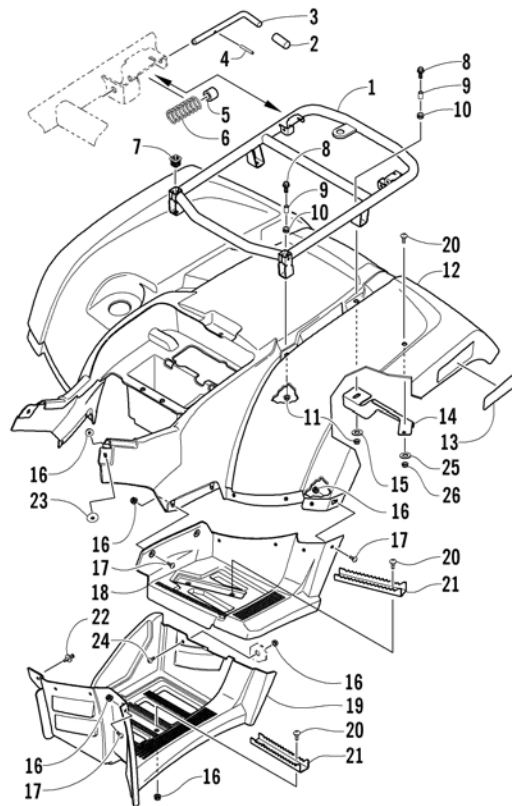

REAR BODY PANEL ASSEMBLY

0740-915



Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1506-873</u>	1	Rack, Rear - Assembly (inc. 2-7)	15	<u>2506-093</u>	1	Bracket, Rear Fender - Left
2	1441-317	2	ø Cap, Vinyl	15	0423-087	2	Washer
3	<u>0541-448</u>	2	ø Pin - Assembly (inc. 4)	16	0423-540	34	Nut, Lock
4	0423-635	2	ø ø Pin, Roll	17	0423-419	22	Screw, Machine
5	0423-036	2	ø Collar	18	2406-042	1	Footwell, Rear - Right
6	0423-636	2	ø Spring		2406-043	1	Footwell, Rear - Left
7	0441-592	4	ø Bushing, Rack	19	1506-813	1	Footwell - Right
8	8410-830	4	Screw, Machine		1506-814	1	Footwell - Left
9	0423-463	4	Spacer	20	0423-355	10	Screw, Shoulder
10	0423-465	4	Grommet	21	1506-125	4	Footpeg
11	8432-802	4	Nut, Lock	22	0623-362	2	Rivet, Reinstallable
12	2406-038	1	Panel, Fender - Red	23	0423-101	2	Screw, Body
	2406-039	1	Panel, Fender - Green (Green)	24	8477-620	2	Screw, Machine
	2406-040	1	Panel, Fender - Cat Green (Cat Green)	25	0623-184	2	Washer
13	0411-820	1	Decal, Reflector - Right	26	8424-602	2	Nut, Hex
	0411-821	1	Decal, Reflector - Left	27	0470-404	2	Grommet
14	<u>2506-092</u>	1	Bracket, Rear Fender - Right				

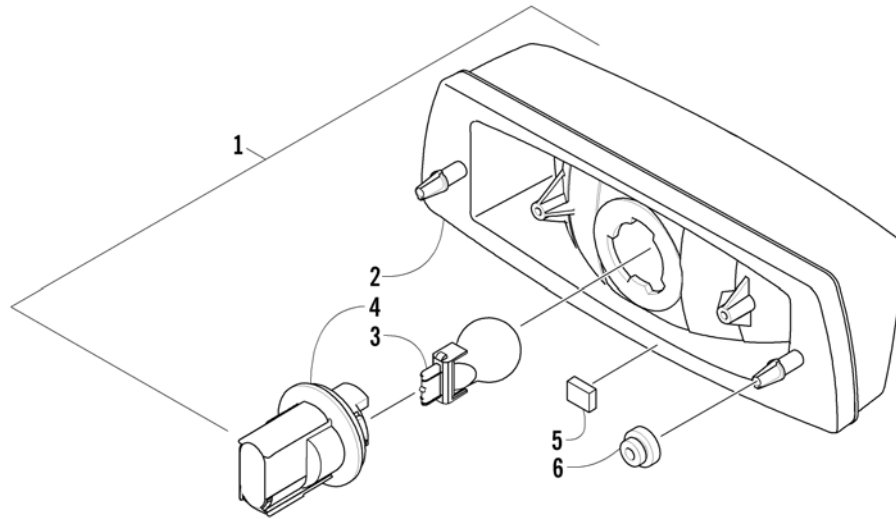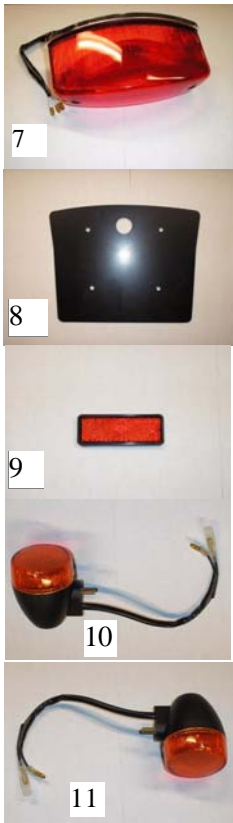

TAILLIGHT ASSEMBLY

0739-987


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0509-022	4	Taillight Assembly (inc. 2-4)	7	AC003-079	1	Taillight New
2	0509-025	4	ø Housing, Taillight	8	AC008-231	1	Bracket Number Plate
3	0409-056	4	ø Bulb, Taillight	9	AC008-139	2	Reflector
4	0409-057	4	ø Socket, Taillight	10	AC003-145	1	Indicator, Left
5	1406-790	4	Pad, Taillight	11	AC003-146	1	Indicator, Right
6	0423-534	2	Grommet	12	AC008-223	2	Bracket, Indicator

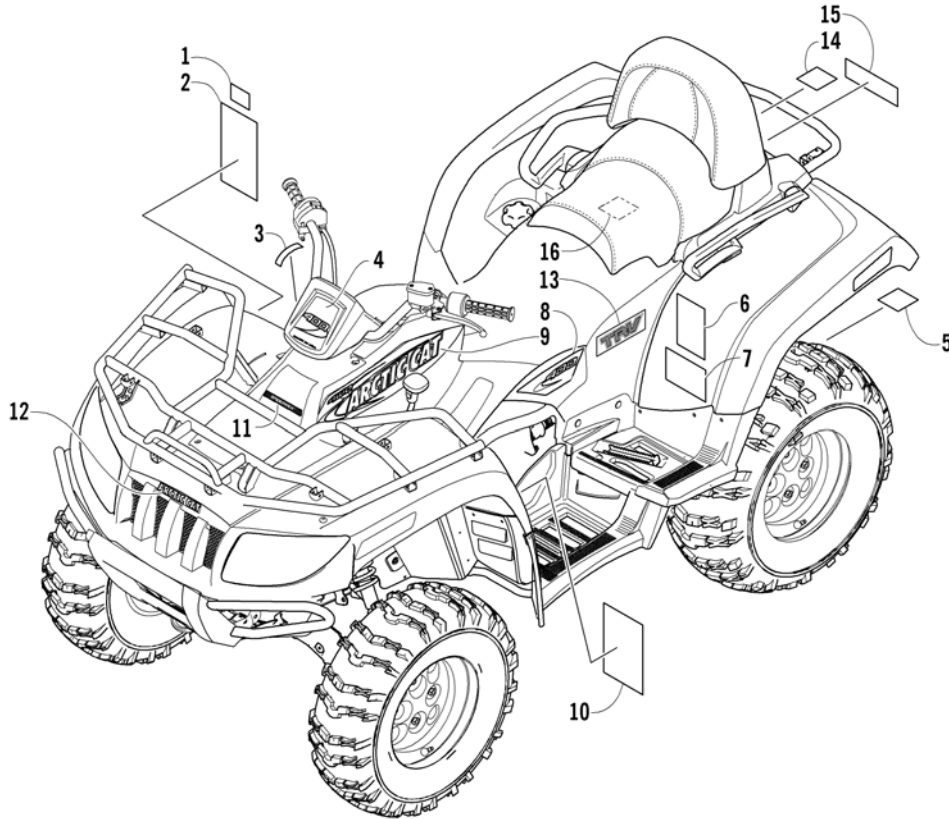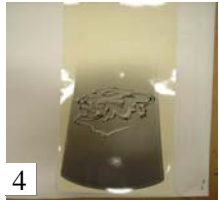

DECALS

0740-992 *Included on Front/Rear Fender Panels


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0411-666	4	Decal, Warning—Reverse/Pre-Ride*		1411-015	4	Decal, Side—Upper Left
2	0411-894	4	Decal, Warning—Hill		1411-016	4	Decal, Side—Upper Right (Green)
3	0411-426	1	Decal, Warning - Clutch Cover		1411-017	4	Decal, Side—Upper Left (Green)
4	1411-047	4	Decal, Instrument Pod		1411-018	4	Decal, Side—Upper Right (Cat Green)
	1411-048	4	Decal, Instrument Pod (Green)		1411-019	4	Decal, Side—Upper Left (Cat Green)
	1411-049	4	Decal, Instrument Pod (Cat Green)		AC001-644	1	ACE Decal Side LH
	AC001-639	1	ACE Decal Head		AC001-645	1	ACE Decal Side RH
5	1411-077	1	Decal, Warning - Towing	10	0411-753	4	Decal, Warning—Age/General*
6	0411-833	4	Decal, Passenger	11	1411-050	1	Decal, "Speedrack"
7	0411-832	1	Decal, Warning - Tire Pressure	12	0411-840	4	Decal, Front
8	1411-252	4	Decal, Side—Lower Right		0411-839	4	Decal, Front (Green)
	1411-253	4	Decal, Side—Lower Left		0411-841	4	Decal, Front (Cat Green)
	1411-254	4	Decal, Side—Lower Right (Green)		AC001-630	1	Decal, Front ARCTIC CAT
	1411-255	4	Decal, Side—Lower Left (Green)	13	1411-264	2	Decal, Graphic—TRV
	1411-136	4	Decal, Side—Lower Right (Cat Green)		1411-266	2	Decal, Graphic—TRV (Green)
	1411-137	4	Decal, Side—Lower Left (Cat Green)		1411-262	2	Decal, Graphic—TRV (Cat Green)
	AC001-654	1	Decal, Side 400 Left	14	1411-251	4	Decal, Warning—Seat/Passenger
	AC001-655	1	Decal, Side 400 Right	15	0411-814	4	Decal, "Arctic Cat"—White
9	1411-014	4	Decal, Side—Upper Right	16	1411-269	4	Decal, Warning—Passenger

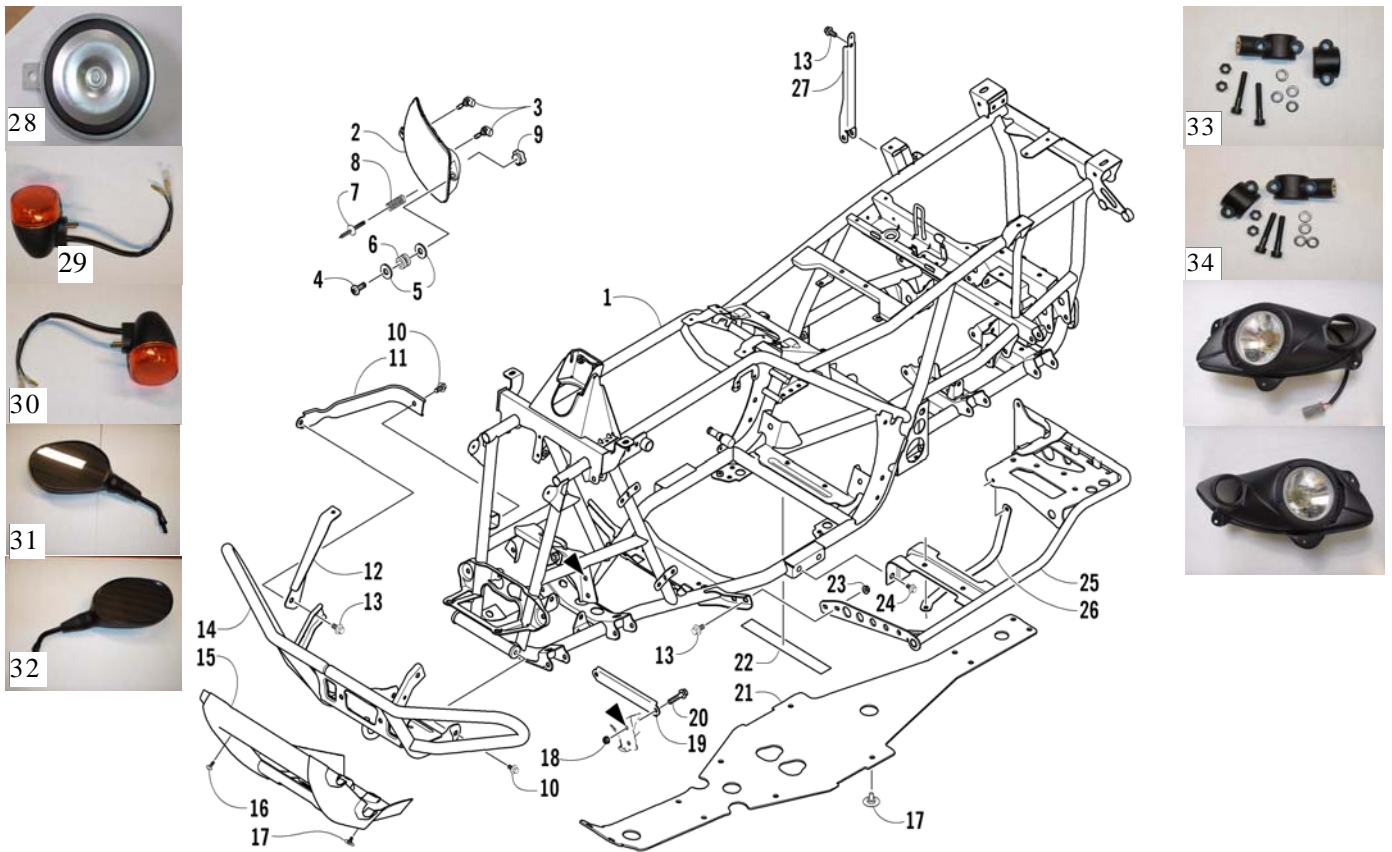

FRAME AND RELATED PARTS

0740-926


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1506-864	1	Frame, Main	19	1506-429	1	Brace, A-Arm
2	0509-034	4	Headlight Assembly - Right (inc. 3)	20	8409-025	2	Screw, Cap
3	0509-035	4	Headlight Assembly - Left (inc. 3)	21	2406-091	1	Panel, Belly
4	0409-055	4	Bulb, Headlight	22	0406-289	1	Pad, Frame
4	0623-785	4	Screw, Self-Tapping	23	8424-802	8	Nut, Flange
5	8050-217	8	Washer	24	8409-016	4	Screw, Cap
6	0423-447	4	Grommet	25	1506-846	1	Footrest - Right
7	0423-514	2	Stud, Adjuster - Headlight		1506-847	1	Footrest - Left
8	0423-522	2	Spring, Adjuster	26	1506-994	1	Strap, Footrest - Right
9	0423-513	2	Knob, Adjuster		1506-995	1	Strap, Footrest - Left
10	8409-020	4	Screw, Cap	27	1506-548	1	Channel, Shock Support
11	0506-653	1	Channel, Bumper Mounting - Right	28	0430-053	1	Horn
	1506-596	1	Channel, Bumper Mounting - Left		2406-321	1	Bracket Mount Horn
12	1506-562	1	Bracket, Mounting - Bumper - Right	29	AC003-145	1	Indicator Left
	1506-563	1	Bracket, Mounting - Bumper - Left	30	AC003-146	1	Indicator Right
13	8408-816	11	Screw, Cap	31	AC008-751	1	Mirror Left
14	1506-855	1	Bumper	32	AC008-752	1	Mirror Right
15	1406-360	1	Grille, Bumper	33	AC008-753	1	Mirror Mounting Left
16	0423-419	2	Screw, Machine	34	AC008-754	1	Mirror Mounting Right
17	0423-101	16	Screw, Body	35	AC003-021	1	Headlight Assembly NIOX Left
18	8428-002	2	Nut, Lock	36	AC003-022	1	Headlight Assembly NIOX Right

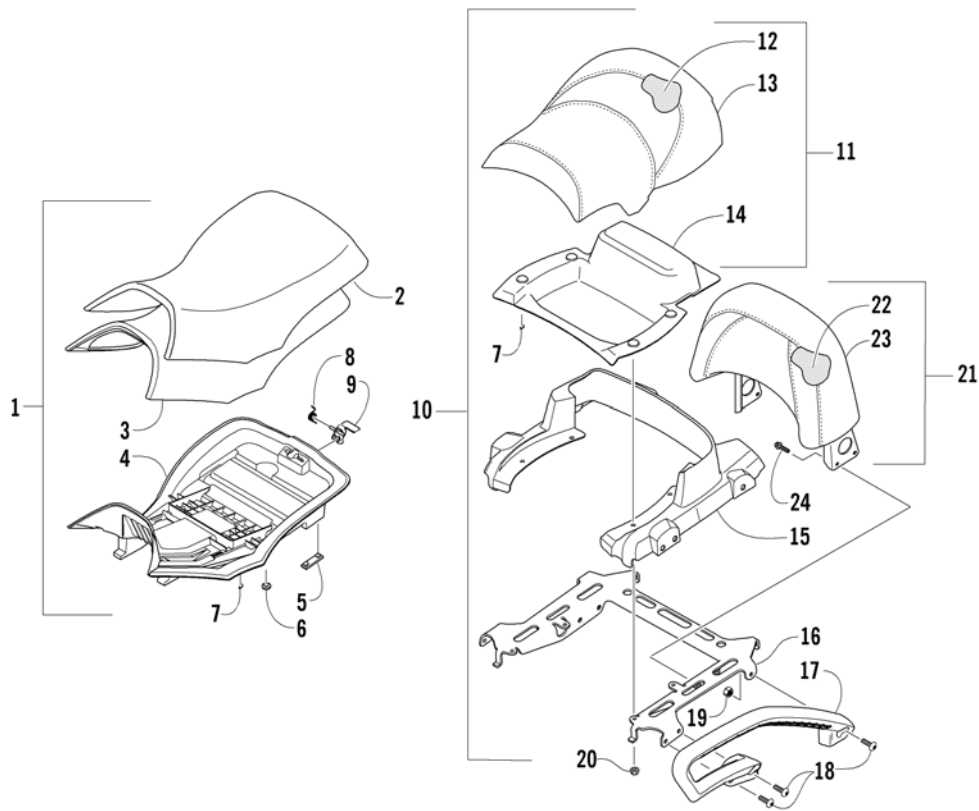

SEAT AND BACKREST ASSEMBLY

0740-930


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1506-937</u>	1	Seat Assembly (inc. 2-9)	13	<u>1506-815</u>	1	ø ø Cover, Seat - Passenger
2	<u>1506-209</u>	1	ø Cover, Seat	14	<u>2406-110</u>	1	ø ø Base, Seat - Inner
3	<u>1506-208</u>	1	ø Foam, Seat	15	<u>2406-044</u>	1	ø Base, Seat - Passenger
4	<u>2406-144</u>	1	ø Base, Seat - Assembly (inc. 5-6)	16	<u>1506-932</u>	1	ø Bracket, Seat Support - Assembly
5	<u>0406-879</u>	2	ø ø Bumper, Seat - Rear	17	<u>2406-112</u>	1	ø Handhold, Passenger - Right
6	<u>0406-877</u>	4	ø ø Bumper, Seat - Front		<u>2406-113</u>	1	ø Handhold, Passenger - Left
7	<u>0624-528</u>	AR	ø Staple	18	<u>0423-362</u>	6	ø Screw
8	<u>1406-592</u>	1	ø Spring, Seat Latch	19	<u>8432-802</u>	6	ø Nut, Hex
9	<u>1506-156</u>	1	ø Latch, Seat	20	<u>0624-250</u>	4	ø Nut, Lock
10	<u>1506-938</u>	1	Seat, Passenger - Assembly (inc. 11-20)	21	<u>1506-939</u>	1	Backrest Assembly (inc. 22-23)
11	<u>2506-064</u>	1	ø Seat, Passenger - Sub-Assembly (inc. 7 and 12-14)	22	<u>1506-818</u>	1	ø Foam, Backrest
12	<u>1506-816</u>	1	ø ø Foam, Seat - Passenger	23	<u>1506-817</u>	1	ø Cover, Backrest
				24	<u>8408-816</u>	4	Screw

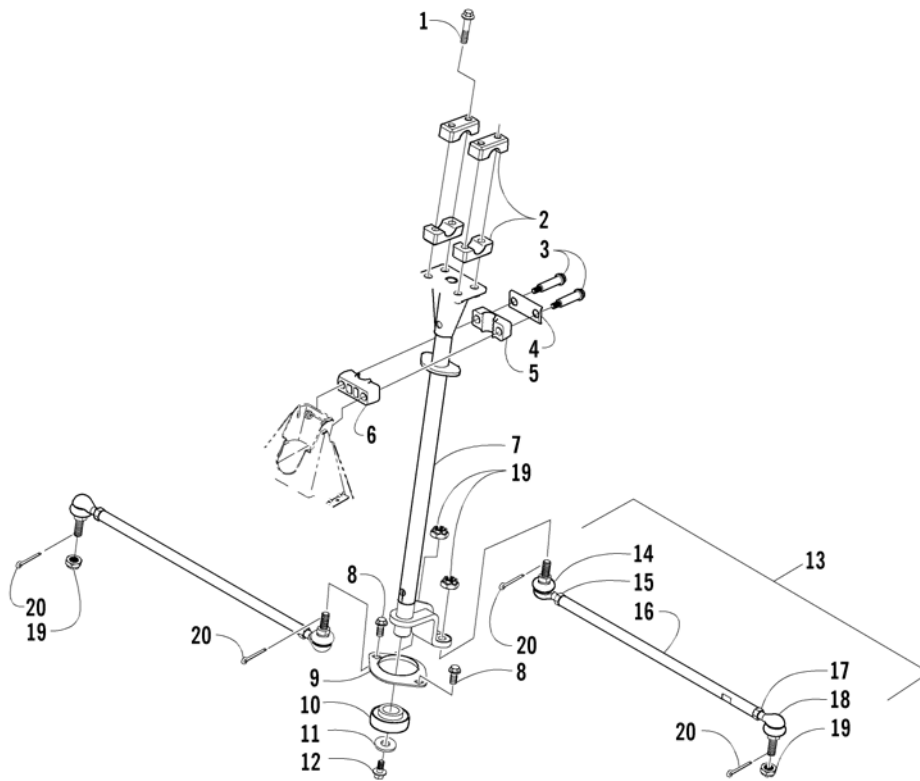

STEERING POST ASSEMBLY

0739-774


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	8408-860	4	Screw, Cap	11	0423-073	1	Washer
2	0405-035	4	Cap, Steering Adjuster	12	8409-020	1	Screw, Cap
3	0423-505	2	Screw, Shoulder	13	0505-408	2	Tie Rod - Assembly (inc. 14-18)
4	0405-166	1	Cap, Housing	14	0405-083	2	∅ Ball Joint, Tie Rod - Left
5	0405-138	1	Housing, Lower	15	0423-013	2	∅ Nut - Left
6	0405-139	1	Housing, Upper	16	0405-107	2	∅ Tie Rod
7	0505-451	1	Post, Steering	17	8420-002	2	∅ Nut - Right
8	8408-816	2	Screw, Cap	18	0405-082	2	∅ Ball Joint, Tie Rod - Right
9	0602-233	1	Flange, Bearing	19	0423-157	4	Nut, Top Lock
10	0405-052	1	Bearing w/Inverted Oil Seal	20	0623-175	4	Pin, Cotter

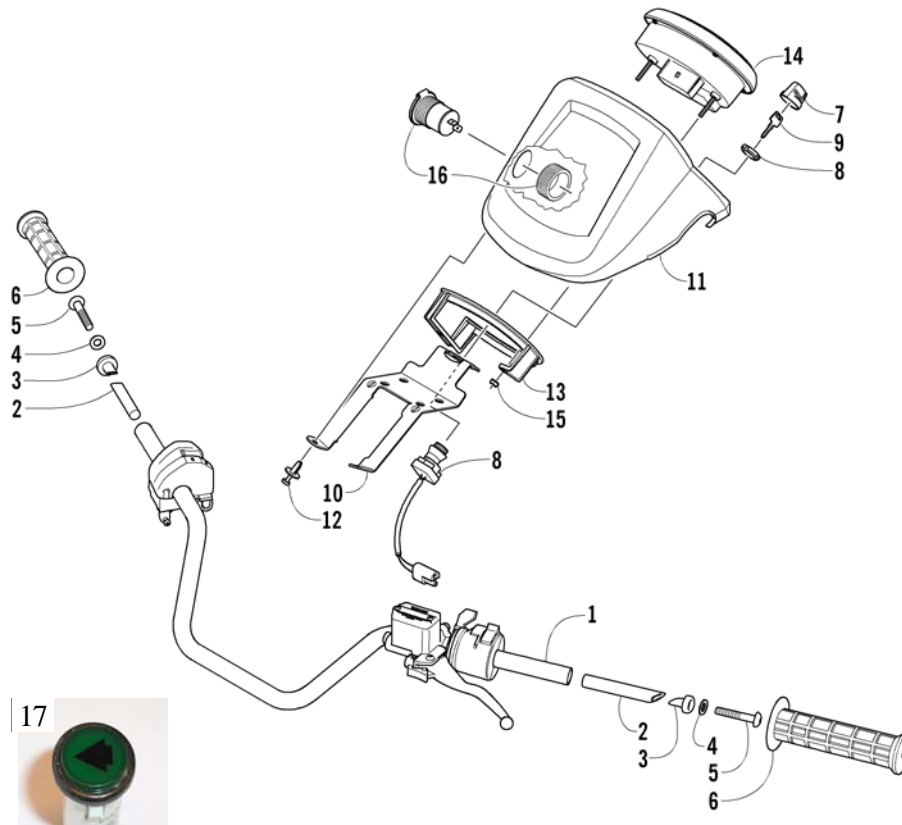

HANDLEBAR ASSEMBLY

0740-932


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0505-418	1	Tube, Handlebar	10	1506-578	1	Bracket, Mounting - Instrument Pod
2	0405-218	2	Plug, Handlebar	11	0405-188	1	Instrument Pod
3	0405-149	2	End Cap, Handlebar		0405-189	1	Instrument Pod (Green)
4	8050-247	2	Washer		0405-190	1	Instrument Pod (Cat Green)
5	8477-845	2	Screw, Machine	12	0423-535	2	Rivet, Reinstallable
6	0405-147	2	Grip, Handlebar	13	0420-065	1	Clamp
7	0409-013	1	Cover, Key	14	0520-014	4	Gauge, LCD
8	3430-040	1	Switch, Ignition - Assembly (inc. 9)		0520-012	1	Gauge, LCD
9	3409-007	1	ø Key, Ignition - Blank (C Series)	15	0423-493	2	Nut, Hex
	3409-011	1	ø Key, Ignition - Blank (D Series)	16	0641-897	1	Outlet, Accessory - 12V
	3409-012	1	ø Key, Ignition - Blank (E Series)	17	0420-072	2	Light Indicator Turn Signal
	3409-013	1	ø Key, Ignition - Blank (F Series)				

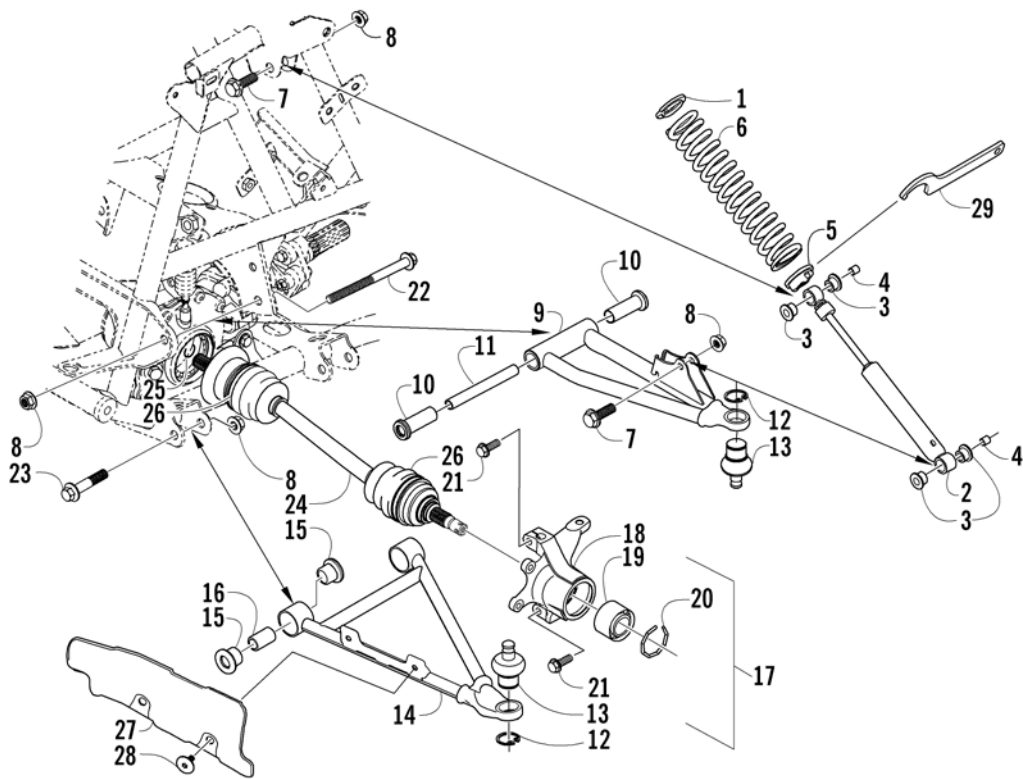

FRONT SUSPENSION ASSEMBLY

0739-603 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1603-889	2	Retainer, Spring	15	0403-115	8	ø Bushing
2	0403-137	2	Shock Absorber - Front (inc. 3-4)	16	0403-114	4	ø Collar
3	0604-310	8	ø Bushing, Shock Absorber	17	<u>0505-460</u>	1	Knuckle - Assembly - Right (inc. 18-20)
4	0403-028	4	ø Sleeve, Shock		<u>0505-461</u>	1	Knuckle - Assembly - Left (inc. 18-20)
5	0403-102	2	Cam, Spring Adjuster	18	*	1	ø Knuckle, Steering - Right
6	<u>0503-318</u>	2	Spring, Shock Absorber - Platinum		*	1	ø Knuckle, Steering - Left
	<u>0503-317</u>	2	Spring, Shock Absorber - Black (Green)	19	1402-027	2	ø Bearing, Wheel Hub
7	8409-040	4	Screw, Cap	20	0423-423	2	ø Ring, Retaining
8	8428-002	10	Nut, Lock	21	8409-030	4	Screw, Cap
9	<u>0503-272</u>	1	A-Arm, Upper Right - Platinum (inc. 10-13)	22	0423-334	2	Screw, Cap
	<u>0503-273</u>	1	A-Arm, Upper Left - Platinum (inc. 10-13)	23	8409-075	4	Screw, Cap
	<u>0503-196</u>	1	A-Arm, Upper Right - Black (inc. 10-13) (Green)	24	<u>0502-812</u>	2	Axle, Drive - Front (inc. 25-26)
	<u>0503-197</u>	1	A-Arm, Upper Left - Black (inc. 10-13) (Green)	25	0441-400	2	ø Clip, Retaining
10	0403-081	4	ø Bushing	26	0436-276	2	ø Repair Kit, Boot
11	0403-080	2	ø Collar	27	<u>0441-752</u>	1	Guard, Boot - Right
12	0423-009	4	ø Clip, Ball Joint		<u>0441-753</u>	1	Guard, Boot - Left
13	0405-115	4	ø Ball Joint - Front		<u>1441-002</u>	1	Guard, Boot - Right (Green)
14	<u>0503-268</u>	1	A-Arm, Lower Right - Platinum (inc. 12-13 and 15-16)		<u>1441-003</u>	1	Guard, Boot - Left (Green)
	<u>0503-269</u>	1	A-Arm, Lower Left - Platinum (inc. 12-13 and 15-16)		<u>0441-756</u>	1	Guard, Boot - Right (Cat Green)
	<u>0503-220</u>	1	A-Arm, Lower Right - Black (inc. 12-13 and 15-16) (Green)		<u>0441-757</u>	1	Guard, Boot - Left (Cat Green)
	<u>0503-221</u>	1	A-Arm, Lower Left - Black (inc. 12-13 and 15-16) (Green)	28	0423-101	4	Screw, Body
				29	0441-587	1	Wrench, Spanner

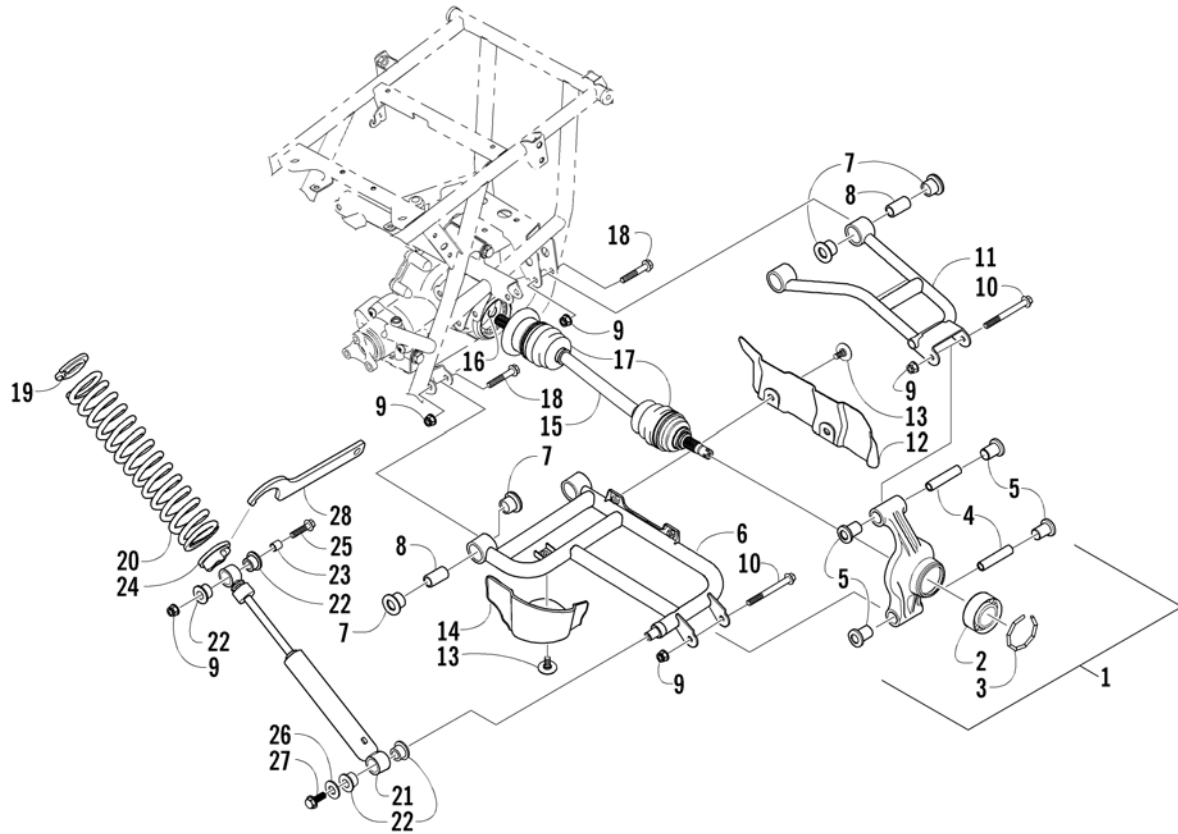

REAR SUSPENSION ASSEMBLY

0740-933


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0504-372	1	Knuckle, Right Rear - Assembly (inc. 2-5)	12	<u>0441-754</u>	1	Guard, Boot - Right
	0504-373	1	Knuckle, Left Rear - Assembly (inc. 2-5)		<u>0441-755</u>	1	Guard, Boot - Left
2	1402-027	2	∅ Bearing, Wheel Hub		<u>1441-004</u>	1	Guard, Boot - Right (Green)
3	0423-423	2	∅ Ring, Retaining		<u>1441-005</u>	1	Guard, Boot - Left (Green)
4	0403-038	4	∅ Collar, Suspension Bushing		<u>0441-758</u>	1	Guard, Boot - Right (Cat Green)
5	0403-032	8	∅ Bushing, Suspension		<u>0441-759</u>	1	Guard, Boot - Left (Cat Green)
6	<u>0504-326</u>	1	A-Arm, Rear - Lower Right - Platinum (inc. 7-8)	13	0423-101	6	Screw, Body
	<u>0504-327</u>	1	A-Arm, Rear - Lower Left - Platinum (inc. 7-8)	14	1406-071	1	Guard, Boot - Right
	0504-320	1	A-Arm, Rear - Lower Right - Black (inc. 7-8) (Green)		1406-072	1	Guard, Boot - Left
	0504-321	1	A-Arm, Rear - Lower Left - Black (inc. 7-8) (Green)	15	<u>0502-811</u>	2	Axle, Drive - Rear (inc. 16-17)
7	0403-115	16	∅ Bushing	16	0441-400	2	∅ Clip, Retaining
8	0403-114	8	∅ Collar	17	0436-276	2	∅ Repair Kit, Boot
9	8428-002	14	Nut, Lock	18	8409-075	8	Screw, Cap
10	8409-000	4	Screw, Cap	19	1603-889	2	Retainer, Spring
11	<u>0504-330</u>	1	A-Arm, Rear - Upper Right - Platinum (inc. 7-8)	20	<u>0404-127</u>	2	Spring, Suspension - Platinum
	<u>0504-331</u>	1	A-Arm, Rear - Upper Left - Platinum (inc. 7-8)		<u>0404-126</u>	2	Spring, Suspension - Black (Green)
	0504-318	1	A-Arm, Rear - Upper Right - Black (inc. 7-8) (Green)	21	0404-099	2	Shock Absorber - Rear (inc. 22-23)
	0504-319	1	A-Arm, Rear - Upper Left - Black (inc. 7-8) (Green)	22	0604-310	8	∅ Bushing, Shock Absorber
				23	0403-028	2	∅ Sleeve, Shock Absorber
				24	0404-057	2	Cam, Spring Adjuster
				25	8409-050	2	Screw, Cap
				26	0423-087	2	Washer
				27	8408-820	2	Screw, Cap
				28	0441-587	1	Wrench, Spanner

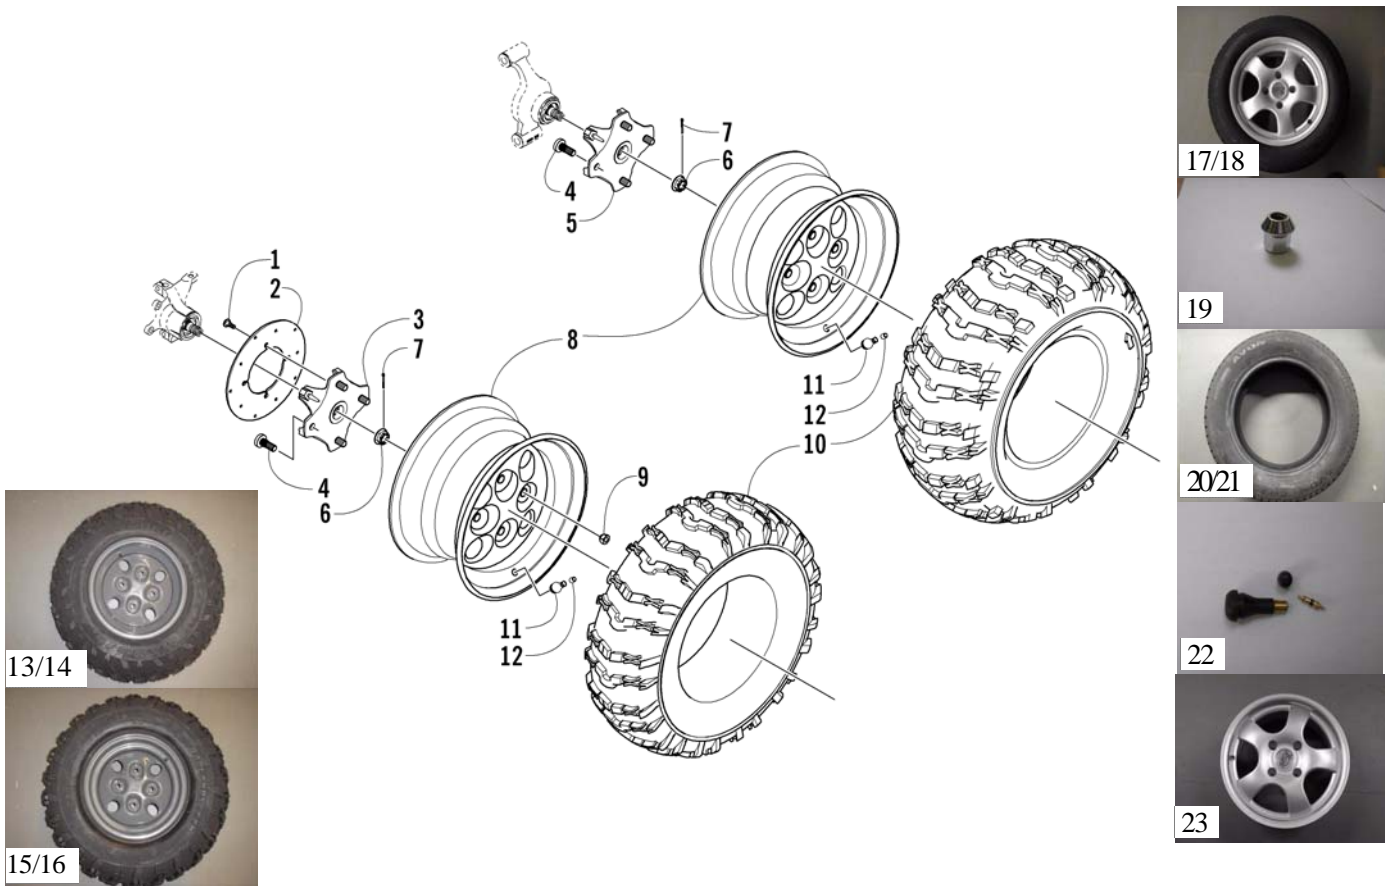

WHEEL AND TIRE ASSEMBLY

0740-358

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0423-557	12	Screw, Shoulder w/Loctite	12	0402-140	4	ø Cap, Valve Stem
2	1402-225	3	Disc, Brake	13	0502-464	1	Wheel, Gray RH 25x8-12
3	0502-599	2	Hub, Wheel - Front (inc. 4)	14	0502-465	1	Wheel, Gray LH 25x8-12
4	0402-974	16	ø Stud, Wheel Hub	15	0502-505	1	Wheel, Gray RH 25x11-12
5	0502-601	1	Hub, Wheel - Rear - Left (inc. 4)	16	0502-506	1	Wheel, Gray LH 25x11-12
	0502-599	1	Hub, Wheel - Rear - Right (inc. 4)	17	AC007-203	2	Wheel Assy. Onroad Front (inc. 20, 22, 23)
6	0423-607	4	Nut, Castle Flange	18	AC007-216	2	Wheel Assy. Onroad Rear (inc. 21-23)
7	0423-407	4	Pin, Cotter	19	AC007-217	16	Nut, Aluminium Rim Silver
8	1402-127	2	Wheel - Front - Platinum	20	AC007-202	1	Road Tire 185/65-15
	1402-115	2	Wheel - Rear - Platinum	21	AC007-215	1	Road Tire 205/60-15
	0402-856	2	Wheel - Front - Gray	22	AC007-209	1	Valve Wheel, Road Tire
	0402-858	2	Wheel - Rear - Gray	23	AC007-221	1	Aluminium Rim Silver
9	0423-408	16	Nut, Mounting - Wheel				
10	1402-100	2	Tire - Front				
	1402-137	2	Tire - Rear				
11	0402-064	4	Stem, Valve (inc. 12)				

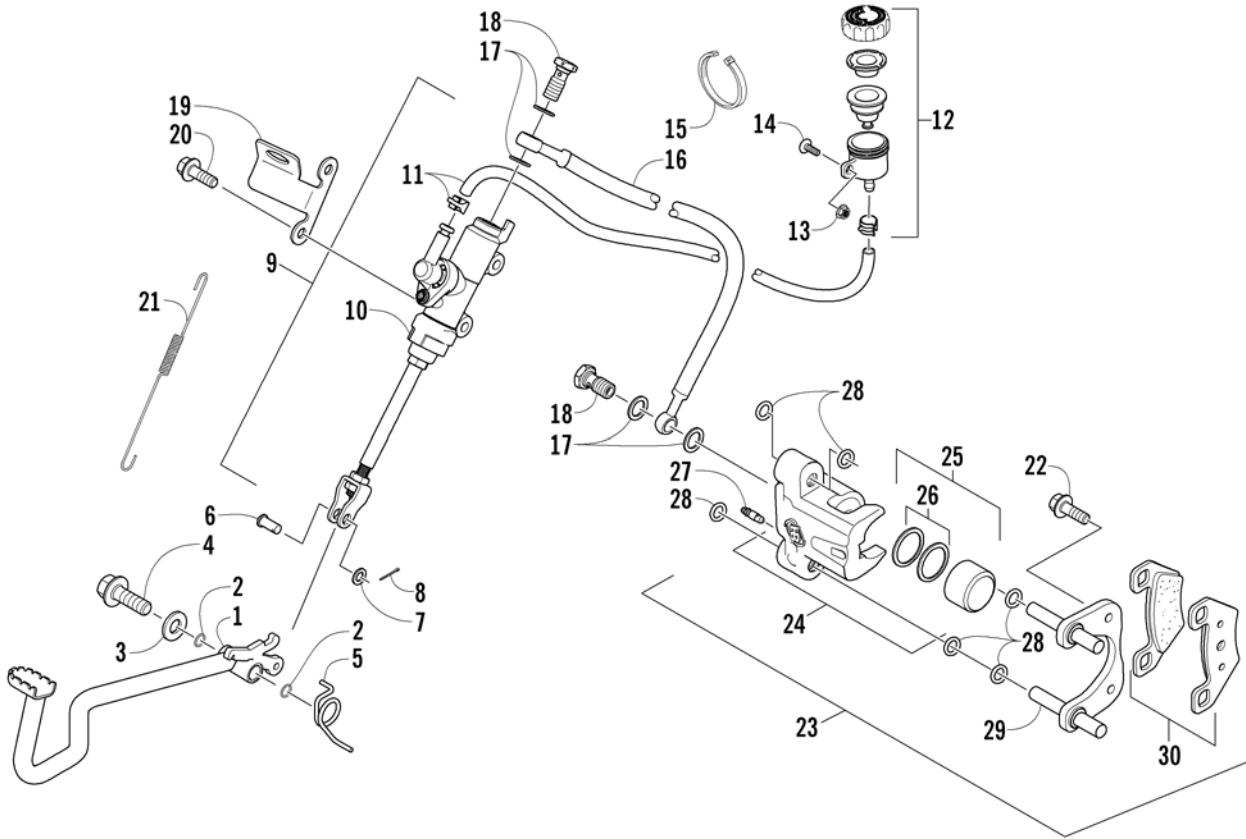


AUXILIARY BRAKE ASSEMBLY

(Fully Bled Master Cylinder Replacement Kit p/n 0502-939)

0740-359 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0502-805</u>	1	Lever, Brake	17	0423-178	4	Washer, Crush
2	1602-213	2	O-Ring	18	0423-413	2	Bolt, Banjo Fitting
3	8050-252	1	Washer	19	<u>0502-840</u>	1	Bracket, Switch
4	8408-816	1	Screw, Cap	20	8408-625	2	Screw, Cap
5	<u>0502-807</u>	1	Spring, Brake Lever	21	<u>0502-785</u>	1	Spring, Brake Switch
6	1402-377	1	Pin, Clevis	22	8408-820	2	Screw, Cap
7	8050-217	1	Washer	23	0502-602	1	Caliper, Brake (inc. 24-30)
8	0402-584	1	Pin, Cotter	24	0502-603	1	∅ Housing, Caliper - Assembly - Right Front (inc. 25-27)
9	<u>0502-881</u>	1	Brake Assembly (inc. 10-12)	25	0502-606	1	∅ ∅ Piston/Seal Set (inc. 26)
10	*	1	∅ Master Cylinder	26	0502-607	1	∅ ∅ Seal Set
11	<u>0502-880</u>	1	∅ Hose, Brake Reservoir	27	0502-609	1	∅ ∅ Valve, Bleed
12	<u>0502-877</u>	1	∅ Reservoir, Brake	28	0502-608	1	∅ O-Ring, Guide - Set
13	0623-038	1	Nut, Flanged	29	0502-605	1	∅ Bracket Assembly
14	8476-616	1	Screw, Machine	30	<u>0502-875</u>	1	∅ Pad, Brake - Set
15	0123-788	1	Cable Tie - 7.5 in.				
16	<u>1402-417</u>	1	Hose, Brake				

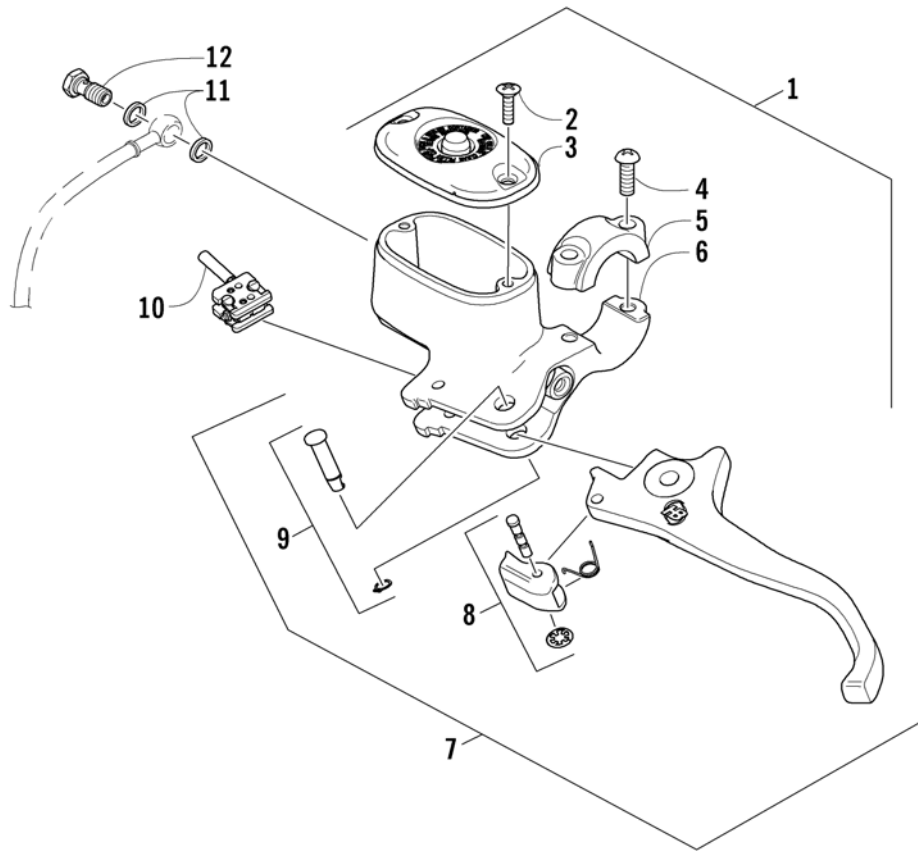

HYDRAULIC HAND BRAKE ASSEMBLY

0739-479


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0502-914</u>	1	Brake Assembly (inc. 2-10)	7	<u>0502-866</u>	1	ø Lever Assembly - Kit (inc. 8-9)
2	<u>0502-566</u>	1	ø Screw, Reservoir Cover - Kit	8	<u>0502-867</u>	1	ø ø Lock, Brake Lever - Kit
3	<u>0502-868</u>	1	ø Cover, Reservoir - Kit	9	0502-580	1	ø ø Lever Pin - Kit
4	<u>0502-568</u>	1	ø Screw, Master Cylinder Clamp - Kit	10	0502-564	1	ø Switch, Brake - Kit
5	<u>0502-869</u>	1	ø Clamp, Master Cylinder - Kit	11	0423-178	2	Washer, Crush
6	<u>0502-704</u>	1	ø Master Cylinder Assembly - Kit	12	0423-413	1	Bolt, Banjo Fitting

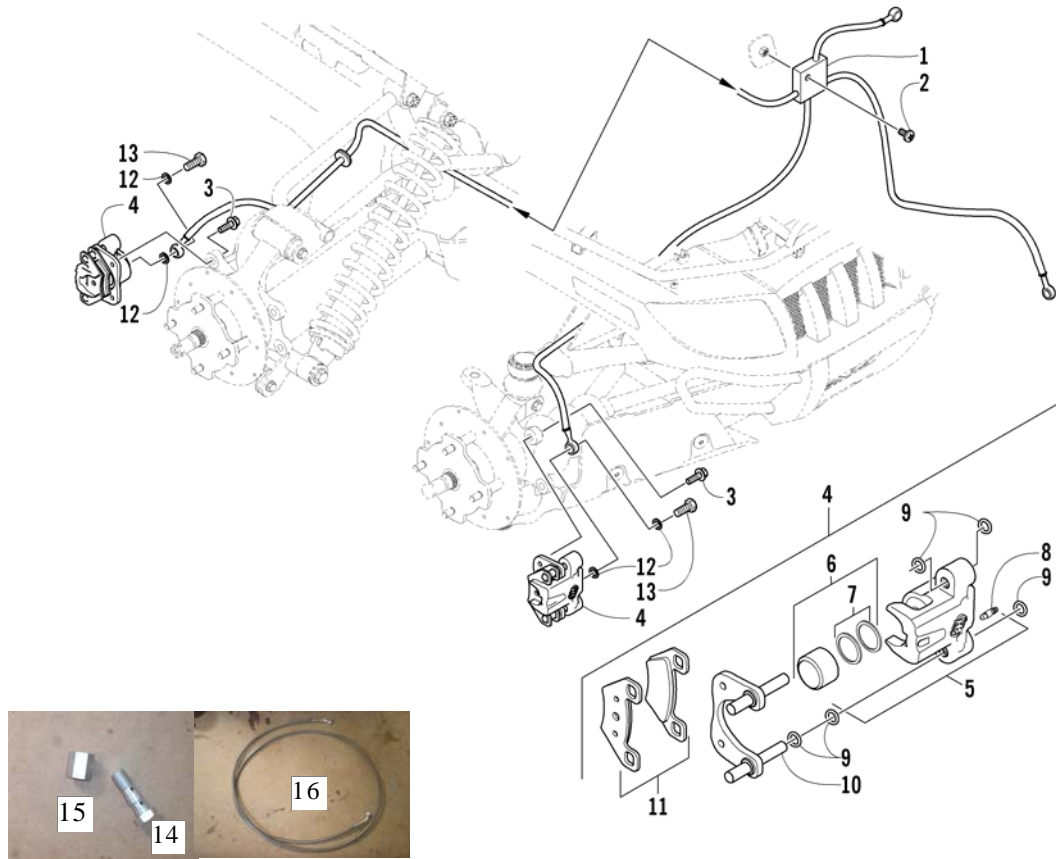

HYDRAULIC BRAKE ASSEMBLY

0740-935


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0502-628</u>	1	Hose, Brake - Assembly	7	0502-607	3	∅ ∅ ∅ Seal Set
2	8476-625	1	Screw, Cap	8	0502-609	3	∅ ∅ Valve, Bleed
3	8408-820	6	Screw, Cap	9	0502-608	3	∅ O-Ring, Guide - Set
4	0502-602	1	Caliper, Brake - Right Front (inc. 5-11)	10	0502-605	3	∅ Bracket Assembly
	0502-610	2	Caliper, Brake - Left Front and Right Rear (inc. 5-11)	11	<u>0502-875</u>	3	∅ Pad, Brake - Set
5	0502-603	1	∅ Housing, Caliper - Assembly - Right Front (inc. 6-8)	12	0423-178	6	Washer, Crush
	0502-611	2	∅ Housing, Caliper - Assembly - Left Front and Right Rear (inc. 6-8)	13	0423-413	3	Bolt, Banjo Fitting
6	0502-606	3	∅ ∅ Piston/Seal Set (inc. 7)	14	0423-610	1	Bolt, Double Banjo Fitting
				15	0423-676	1	Cap, Banjo M10x1.25 THDS
				16	1402-539	1	Hose, Brake - 2181 LG

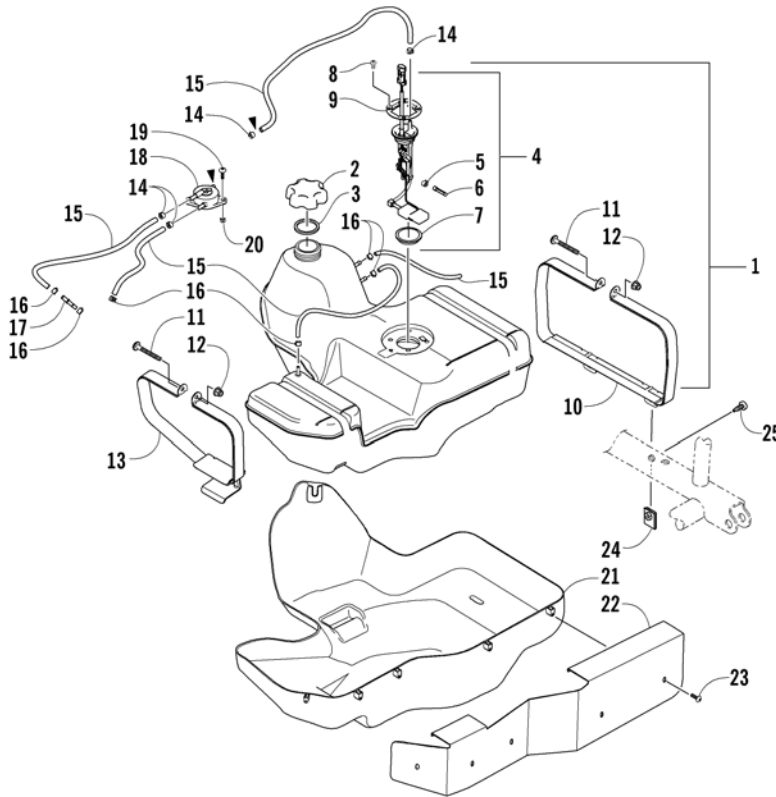

GAS TANK ASSEMBLY

0740-936


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0570-111</u>	1	Tank, Gas - Assembly (inc. 2-9)	14	0423-461	4	Clamp, Hose
2	0470-438	1	ø Cap, Gas Tank (inc. 3)	15	0410-070	AR	Hose, Gasline - 25 ft
3	0109-733	1	ø ø Gasket, Gas Tank Cap	16	1623-233	6	Clamp, Hose
4	0570-114	1	ø Sensor, Fuel Level (inc. 5-7)	17	0470-527	1	Fitting, Straight
5	0423-603	1	ø ø Clamp, Hose	18	0470-519	1	Pump, Fuel
6	0470-475	1	ø ø Filter, Fuel	19	8476-620	2	Screw, Machine
7	0470-521	1	ø ø Seal, Fuel Level Sensor	20	0623-038	2	Nut, Lock
8	1623-158	4	ø Screw, Self-Tapping	21	0470-479	1	Shield, Heat
9	<u>0470-567</u>	1	ø Plate, Mounting - Fuel Level Sensor	22	0470-474	1	Shield, Heat
10	<u>0570-131</u>	1	Strap, Gas Tank Mounting	23	0623-791	5	Screw, Self-Tapping
11	8476-650	2	Screw, Machine	24	<u>0470-536</u>	2	Clip, Gas Tank Mounting
12	8427-602	2	Nut	25	0423-609	2	Screw, Gas Tank Mounting
13	<u>0570-132</u>	1	Strap, Gas Tank Mounting				

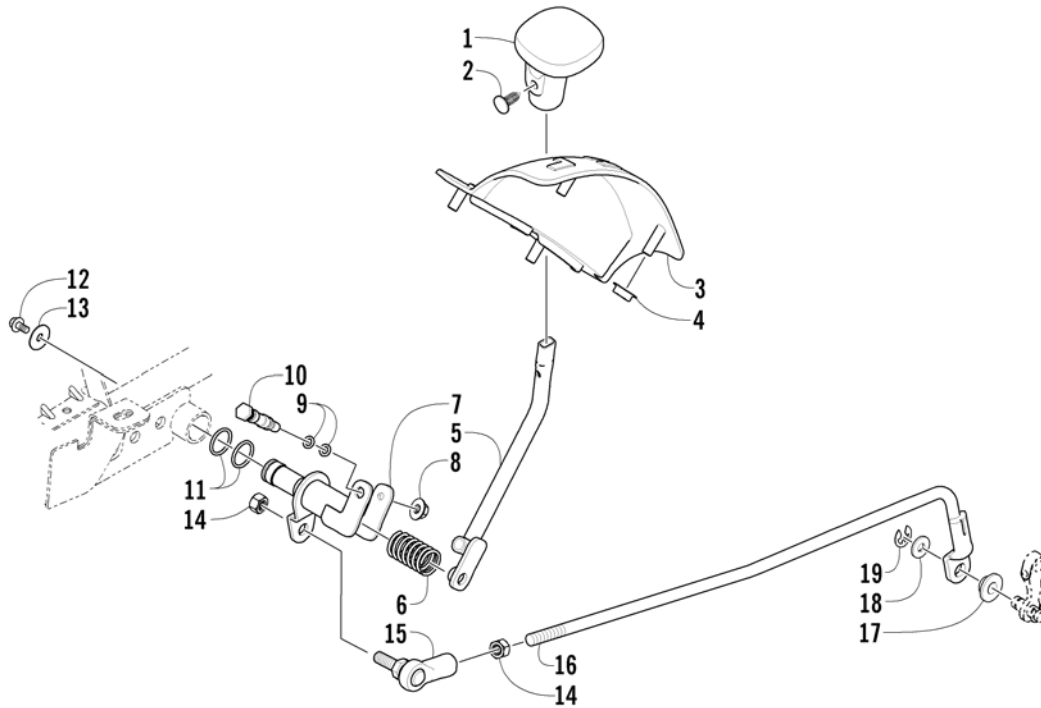

REVERSE SHIFT LEVER ASSEMBLY

0740-360


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0402-843	1	Knob, Reverse Shift	11	0423-299	2	O-Ring
2	0423-345	1	Clip, Push	12	8408-812	1	Screw, Cap
3	1402-110	1	Plate, Shift	13	0423-087	1	Washer
4	0423-357	4	Nut, Stamped	14	0623-294	2	Nut
5	0502-659	1	Lever, Reverse Shift	15	1402-270	1	End, Rod
6	0502-410	1	Spring, Reverse Shift Lever	16	0502-671	1	Linkage, Shift
7	0502-742	1	Axle, Reverse Shift Lever	17	0423-091	1	Bushing, Shift Linkage
8	8424-602	1	Nut	18	8050-242	1	Washer
9	0423-182	2	O-Ring	19	0423-169	1	E-Ring
10	0402-675	1	Axle, Pivot				

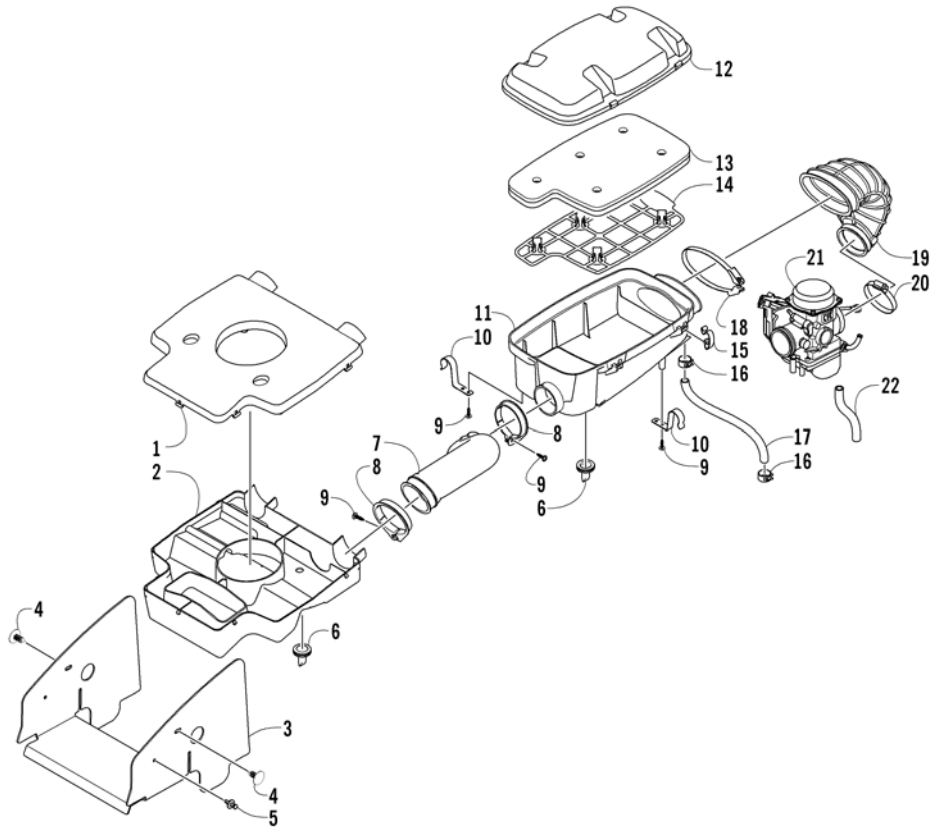

AIR INTAKE ASSEMBLY

0740-746


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0413-091	1	Diverter, Air - Top	12	0470-554	1	Cover, Air Intake
2	0413-111	1	Diverter, Air - Bottom	13	0470-663	1	Filter, Air
3	1406-747	1	Shroud, Splash	14	0470-516	1	Screen, Air Filter
4	0623-544	2	Plug	15	0423-455	4	Clip, Spring
5	0623-362	2	Rivet, Reinstallable	16	0423-045	2	Clamp, Hose
6	0470-442	2	Valve, Drain	17	0410-087	1	Hose, Vent - Crankcase
7	0470-529	1	Boot, Air Intake	18	0423-554	1	Clamp, Boot
8	0423-551	2	Clamp, Boot	19	0470-517	1	Boot, Carburetor
9	0423-342	7	Screw, Self-Tapping	20	0423-019	1	Clamp, Boot
10	0423-454	2	Clip, Mounting - Air Intake	21	0470-646	1	Carburetor, CVK34-AE
11	0470-540	1	Housing, Air Intake	22	0510-592	1	Hose, Carburetor Drain

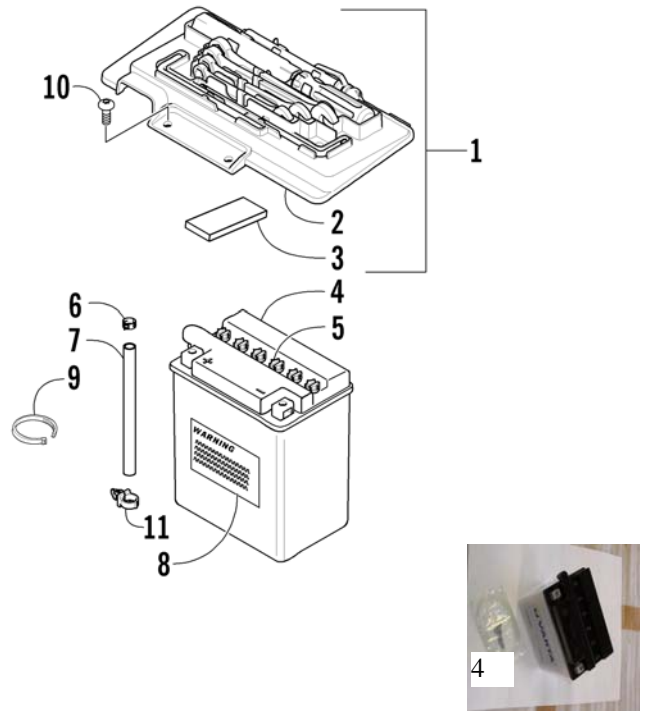

BATTERY ASSEMBLY

0740-445 *Not Illustrated


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	5990-839	1	Battery Cover/Tool Tray Assy (inc. 2-3)	6	0645-152	1	∅ Clamp, Hose
2	1406-507	1	∅ Cover, Battery	7	0645-263	1	∅ Hose, Battery Vent
3	0406-288	2	∅ Pad, Battery	8	0645-151	1	∅ Label, Warning - Battery
*	0444-122	1	Kit, Tool	9	0123-903	4	Cable Tie - 11.5 in.
4	0745-045	4	Battery Assembly (inc. 5-8)	10	8476-616	2	Screw, Machine
	AC003-005	1	Battery	11	0623-101	1	Routing Clip, Snap-In
5	0645-045	6	∅ Cap, Battery				

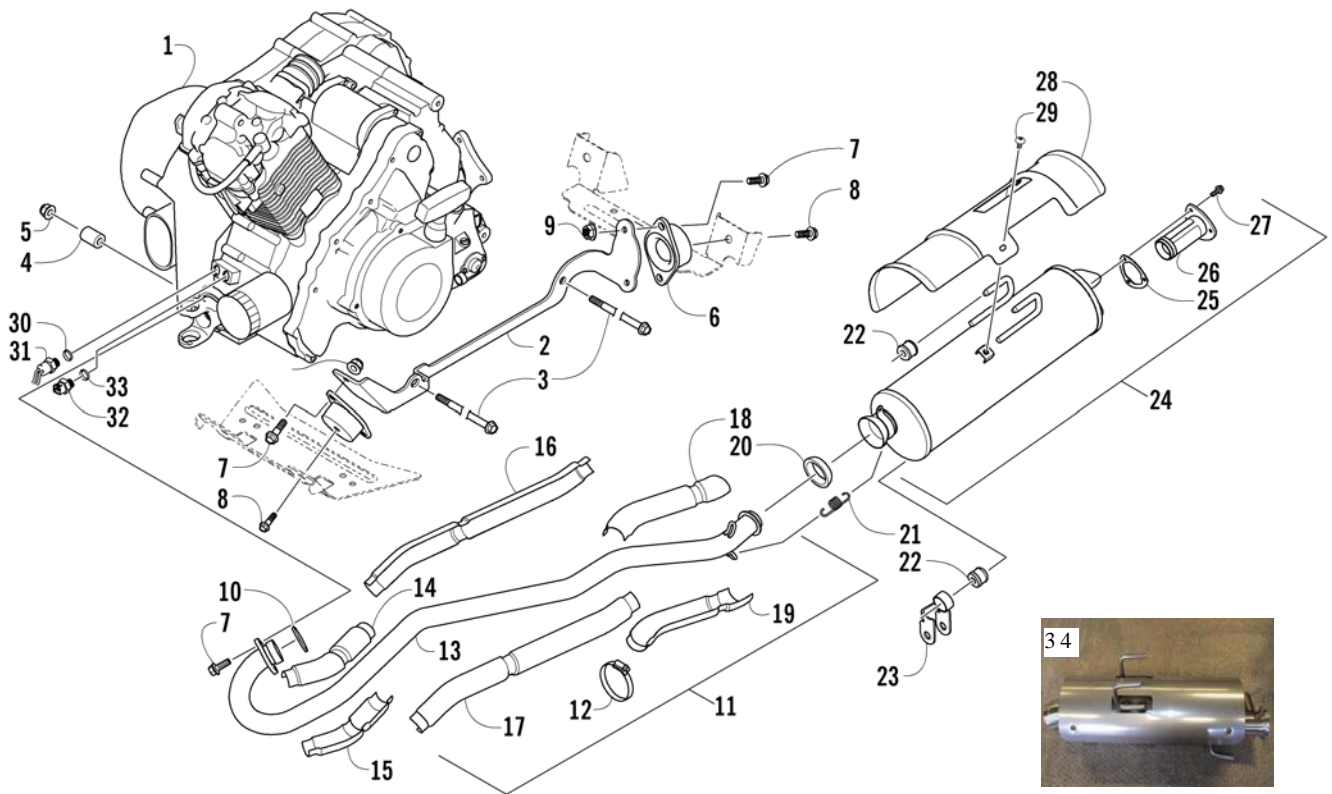

ENGINE AND EXHAUST

0741-108R


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0462-036	1	Engine	18	0412-282	1	ø Shield, Exhaust Pipe - Rear - Upper
2	1506-740	1	Bracket, Engine Mounting - Right	19	0412-283	1	ø Shield, Exhaust Pipe - Rear - Lower
	1506-741	1	Bracket, Engine Mounting - Left	20	0612-188	1	Seal, Exhaust
3	0423-405	2	Screw, Cap	21	0612-668	2	Spring, Extension
4	0423-042	2	Spacer	22	0412-215	3	Bushing, Exhaust Pipe
5	8428-002	2	Nut, Lock	23	1506-732	1	Channel, Muffler Support
6	2406-065	4	Mount, Rubber - Engine	24	0512-306	4	Muffler Assembly (inc. 25-27)
7	8408-820	10	Screw, Cap	25	0412-313	4	ø Gasket, Spark Arrester
8	8408-012	4	Screw, Cap	26	0512-219	4	ø Arrester, Spark Assembly
9	8432-802	8	Nut	27	8408-616	3	ø Screw, Cap
10	0412-007	1	Seal, Exhaust	28	0412-373	4	Cover, Muffler
11	0512-262	1	Pipe, Exhaust - Assembly (inc. 12-19)	29	8477-610	3	Screw, Machine
12	0423-317	6	ø Hose Clamp	30	3402-013	1	Gasket
13	0512-281	1	ø Pipe, Exhaust	31	3430-033	1	Switch, Cooling Fan
14	0412-292	1	ø Shield, Exhaust Pipe - Front - Upper	32	3530-037	1	Switch, Oil Light
15	0412-293	1	ø Shield, Exhaust Pipe - Front - Lower	33	3402-556	1	Gasket
16	0412-294	1	ø Shield, Exhaust Pipe - Center - Inner	34	AC004-707	1	Exhaust Model 2006
17	0412-295	1	ø Shield, Exhaust Pipe - Center - Outer				

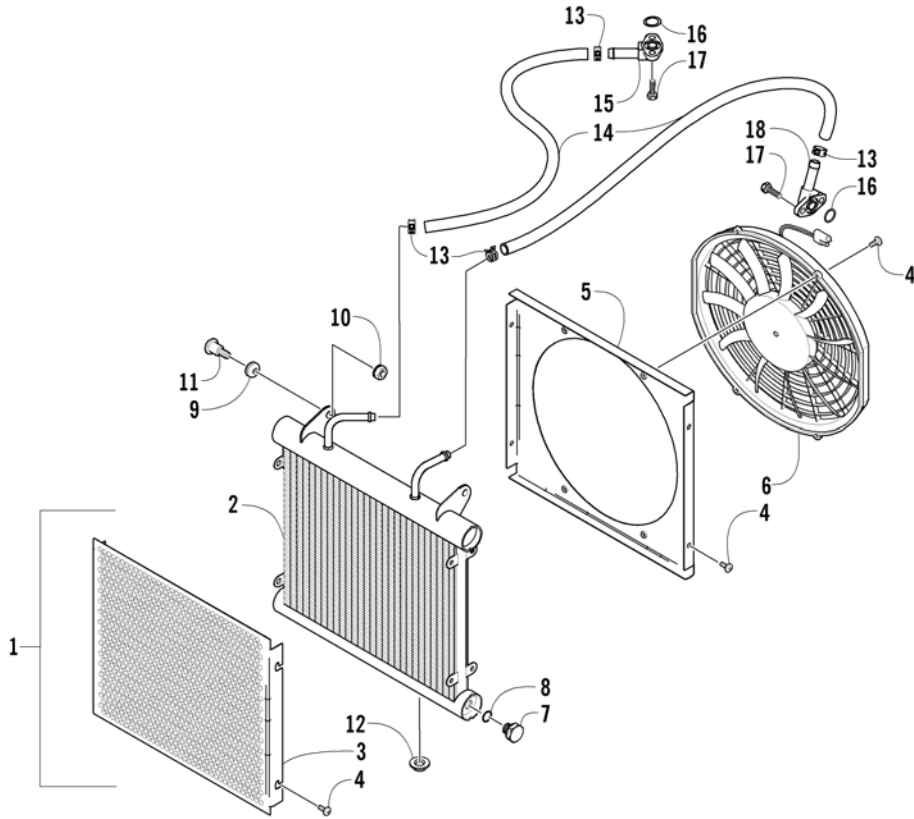

OIL COOLER ASSEMBLY

0740-369


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0413-118	1	Cooler, Oil - Assembly (inc. 2-9)	10	0623-038	2	Nut w/Washer
2	0413-053	1	ø Cooler, Oil	11	0423-484	2	Screw, Shoulder
3	0413-007	1	ø Screen, Oil Cooler	12	0423-028	2	Bushing, Stem
4	8475-512	12	ø Screw, Machine	13	0423-098	4	Clamp, Hose
5	0413-064	1	ø Shroud, Fan	14	0410-044	2	Hose, Oil
6	0413-044	1	ø Fan, Cooling	15	0410-013	1	Fitting, Oil
7	0413-058	1	ø Plug, Drain	16	0423-089	2	O-Ring, Oil Fitting
8	0413-059	1	ø O-Ring	17	8471-616	4	Screw, Cap
9	0423-030	2	ø Grommet	18	0410-012	1	Fitting, Oil - Angled

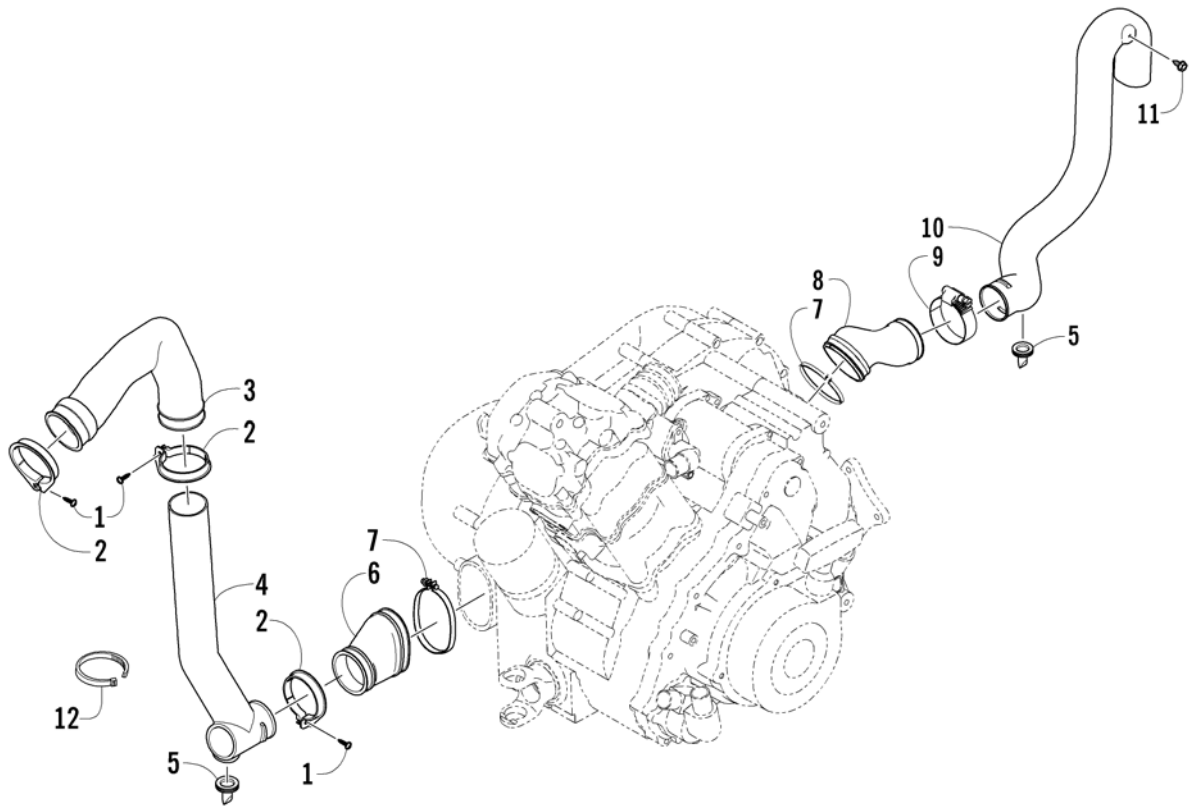

CASE/BELT COOLING ASSEMBLY

0740-881


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0423-342	3	Screw, Self-Tapping	7	3402-449	2	Clamp, Boot
2	0423-551	3	Clamp, Boot	8	0413-060	1	Boot, Duct - Rear
3	0413-092	1	Boot, Air-In	9	0423-380	1	Clamp, Duct
4	0513-010	1	Duct, Belt Cooling - Front	10	0413-106	1	Duct, Belt Cooling - Rear
5	0470-442	2	Valve, Drain	11	0623-301	1	Screw, Self-Tapping
6	0413-048	1	Boot, Duct - Front	12	0123-903	1	Cable Tie - 11.5 in.

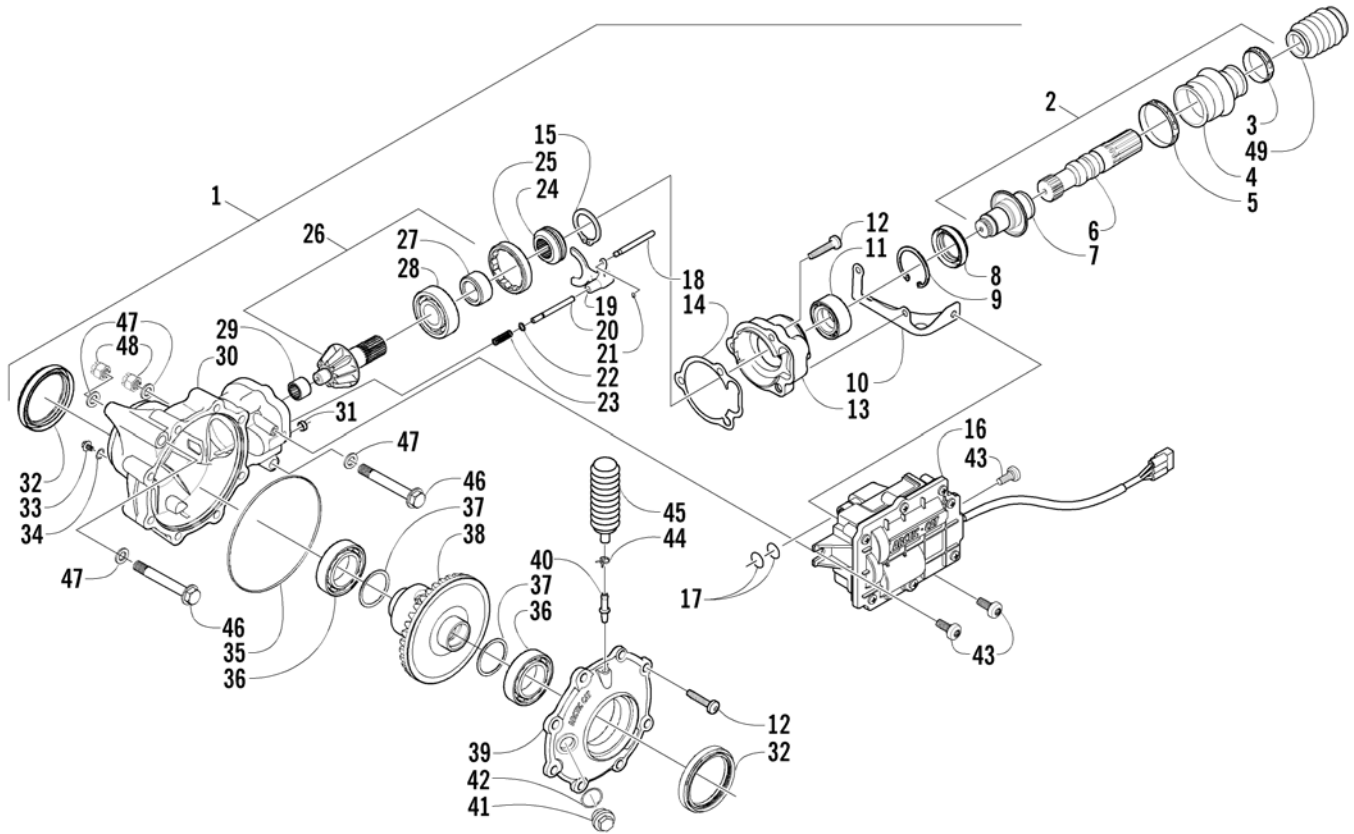

FRONT DRIVE GEARCASE ASSEMBLY

0740-941


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0502-815	1	Gearcase, Front Drive - Assembly (inc. 2-43)	27	0402-336	1	ø ø Collar, Retaining
2	0502-386	1	ø Shaft, Propeller - Assembly (inc. 3-7)	28	0402-327	1	ø ø Bearing
3	0423-411	1	ø ø Clamp, Boot	29	0402-328	1	ø Bearing
4	0402-985	1	ø ø Boot, Propeller Shaft	30	0502-120	1	ø Housing, Gearcase
5	0423-393	1	ø ø Clamp, Boot	31	0402-411	1	ø Pin, Dowel
6	1402-046	1	ø ø Shaft, Output	32	0402-394	2	ø Seal
7	0502-407	1	ø ø Shaft, Input	33	0402-450	1	ø Plug, Magnetic (inc. 34)
8	1402-011	1	ø Seal	34	0423-153	1	ø ø O-Ring
9	0423-423	1	ø Ring, Retaining	35	0423-149	1	ø O-Ring
10	0502-347	1	ø Bracket, Actuator	36	0402-393	2	ø Bearing
11	1402-043	1	ø Bearing	37	0402-405	AR	ø Shim
12	0423-118	11	ø Screw, Self-Tapping		0402-406	AR	ø Shim
13	0502-528	1	ø Housing, Pinion		0402-407	AR	ø Shim
14	0402-947	1	ø Gasket, Flange		0402-408	AR	ø Shim
15	0423-417	1	ø Ring, Retaining		0402-409	AR	ø Shim
16	0502-296	1	ø Actuator (inc. one No. 17)	38	0502-779	1	ø Gear, Ring - 36T
17	0423-498	2	ø ø O-Ring	39	0502-121	1	ø Cover, Gearcase
18	0402-997	1	ø Shaft, Selector	40	1402-104	1	ø Fitting
19	0402-998	1	ø Fork, Selector	41	0402-333	1	ø Plug, Fill (inc. 42)
20	0402-417	1	ø Shaft, Shuttle	42	0423-154	1	ø ø O-Ring
21	0423-402	1	ø Ring, Retaining	43	0423-396	3	ø Screw, Self-Tapping
22	0423-147	1	ø O-Ring	44	0423-315	1	Clamp, Fitting
23	0402-999	1	ø Spring, Return	45	0402-147	1	Bladder, Gearcase
24	0402-413	1	ø Coupler, Drive	46	0423-404	2	Screw, Cap
25	0402-357	1	ø Collar, Lock	47	0423-426	4	Washer
26	0502-783	1	ø Gear, Pinion - Assembly - 10T (inc. 27-28)	48	8428-002	2	Nut, Lock
				49	0402-966	1	Boot, Shaft

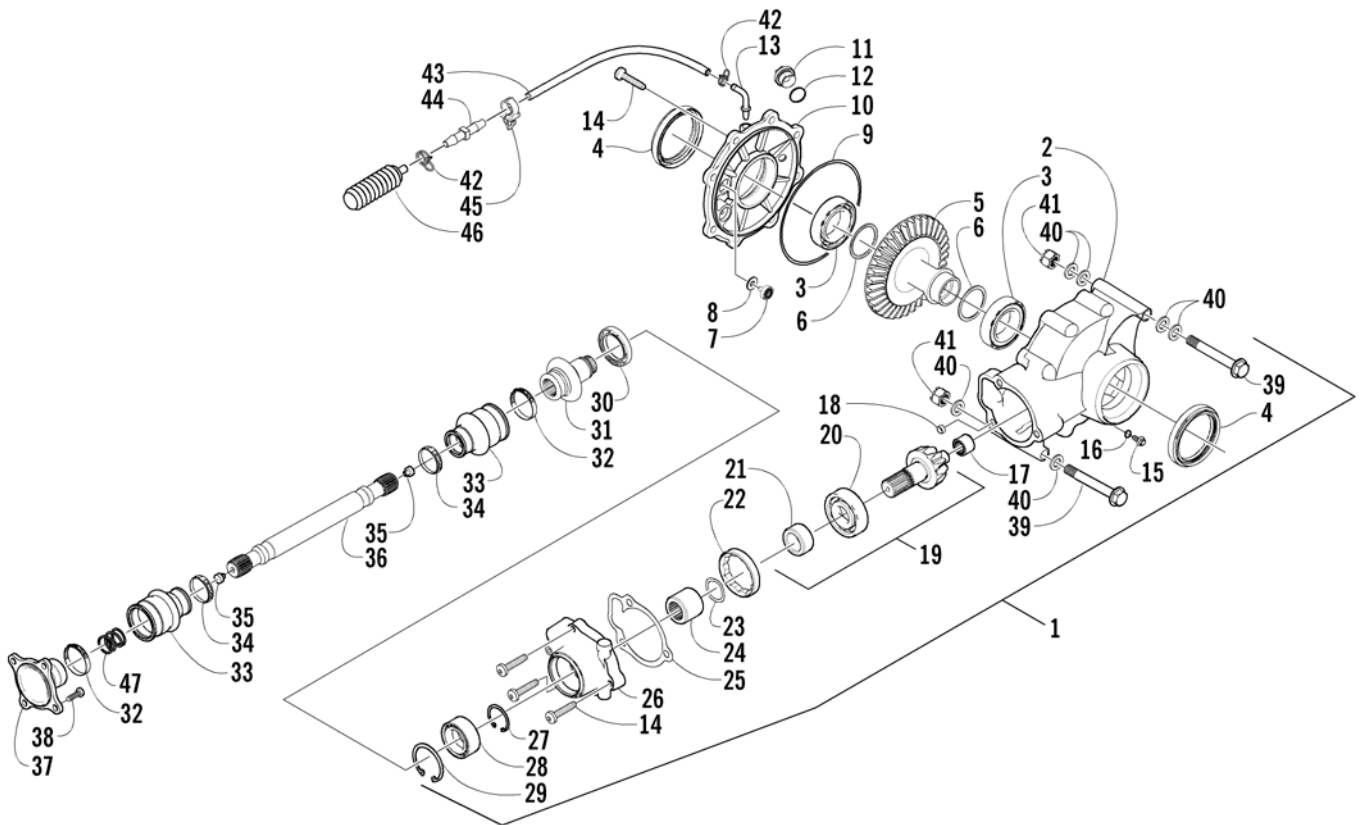

REAR DRIVE GEARCASE ASSEMBLY

0740-972


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0502-820	1	Gearcase, Rear Drive - Assembly (inc. 2-31)	20	0402-327	1	ø ø Bearing
2	0502-622	1	ø Housing, Gearcase	21	0402-336	1	ø ø Collar, Retaining
3	0402-393	2	ø Bearing	22	0402-331	1	ø Collar, Lock
4	0402-394	2	ø Seal	23	0402-982	1	ø Washer, Wave
5	1402-032	1	ø Gear, Ring - 36T	24	0402-981	1	ø Collar, Shaft
6	0402-405	AR	ø Shim	25	0402-947	1	ø Gasket, Flange
	0402-406	AR	ø Shim	26	0502-529	1	ø Housing, Pinion
	0402-407	AR	ø Shim	27	0423-417	1	ø Ring, Retaining
	0402-408	AR	ø Shim	28	1402-043	1	ø Bearing
	0402-409	AR	ø Shim	29	0423-423	1	ø Ring, Retaining
7	0402-326	1	ø Button, Thrust	30	1402-011	1	ø Seal
8	0402-429	AR	ø Shim	31	0502-407	1	ø Shaft, Input
	0402-430	AR	ø Shim	32	0423-393	2	Clamp, Boot
	0402-431	AR	ø Shim	33	0402-985	2	Boot
	0402-432	AR	ø Shim	34	0423-411	2	Clamp, Boot
	0402-433	AR	ø Shim	35	0673-618	2	Bumper, Propeller Shaft
9	0423-149	1	ø O-Ring	36	1402-092	1	Shaft, Propeller
10	0502-346	1	ø Cover, Gearcase	37	0402-950	1	Flange, Output
11	0402-333	1	ø Plug, Fill (inc. 12)	38	8408-820	4	Screw, Cap
12	0423-154	1	ø ø O-Ring	39	0423-404	2	Screw, Cap
13	1402-102	1	ø Fitting	40	0423-426	6	Washer
14	0423-118	11	ø Screw, Self-Tapping	41	8428-002	2	Nut, Lock
15	0402-450	1	ø Plug, Magnetic (inc. 16)	42	0423-315	3	Clamp, Fitting
16	0423-153	1	ø ø O-Ring	43	0410-049	AR	Hose, Vent
17	0402-328	1	ø Bearing	44	0470-462	1	Fitting, Vent
18	0402-411	1	ø Pin, Dowel	45	0623-101	1	Clip, Routing - Snap-In
19	0502-783	1	ø Gear, Pinion - Assembly - 10T (inc. 20-21)	46	0402-147	1	Bladder, Gearcase
				47	1402-026	1	Spring

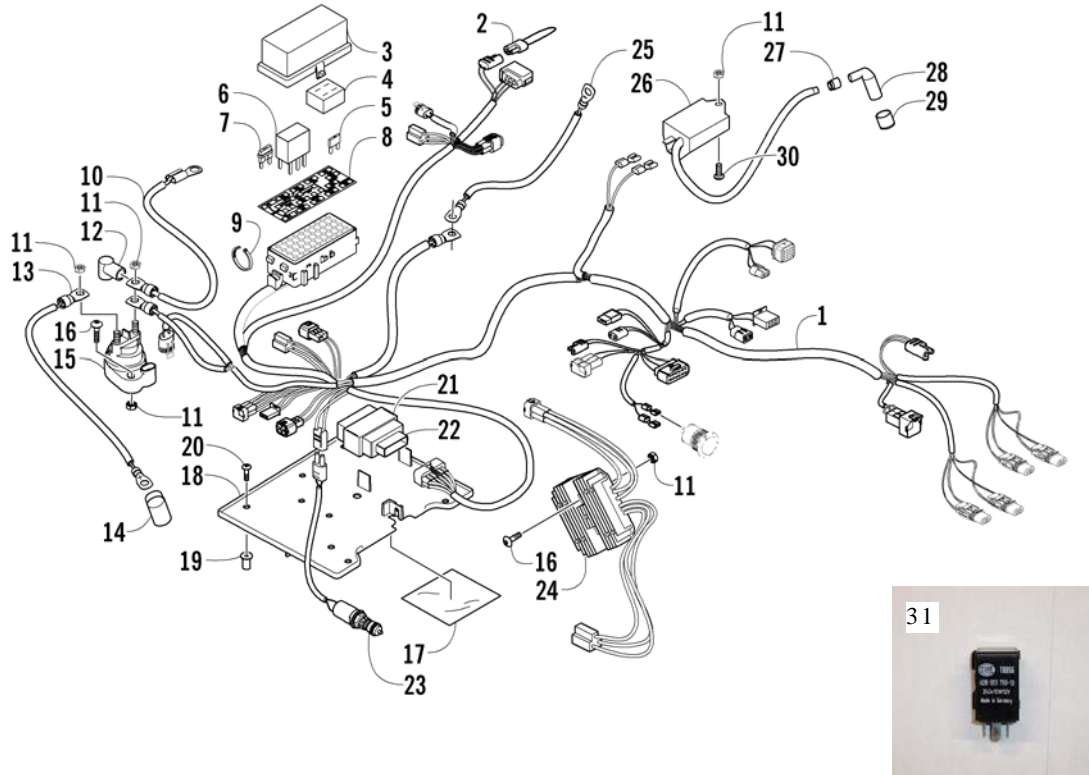

WIRING HARNESS ASSEMBLY

0741-110

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0486-193	4	Harness, Main (inc. 2-8 and two No. 9)	15	0445-036	1	Solenoid
	0486-198	1	Harness, Main 06 Europe	16	8476-625	4	Screw, Machine
2	0486-164	1	ø Tether, Accessory Connector	17	0412-291	1	Shield, Heat
3	0530-008	1	ø Cover, Fuse Block	18	1406-787	1	Tray, Electrical
4	0430-037	1	ø Holder, Fuse	19	0123-010	4	Nut, Expansion
5	0430-034	3	ø Diode	20	0623-121	4	Screw, Machine
6	0430-033	3	ø Relay	21	3402-684	1	Cushion, CDI Unit
7	0430-032	4	ø Fuse - 10 Amp	22	3402-683	1	CDI Unit
	0430-031	3	ø Fuse - 15 Amp	23	0409-072	1	Switch, Brake - Assembly
	0430-030	2	ø Fuse - 30 Amp	24	3402-682	1	Regulator, Voltage
8	0411-828	1	ø Decal, Fuse Block	25	0445-045	4	Cable, Battery/Ground
9	0123-788	AR	ø Cable Tie - 7.5 in.		0445-054	1	Cable, Battery/Engine
10	0445-044	4	Cable, Solenoid/Starter	26	3430-055	1	Coil, Ignition - Assembly
	0445-053	1	Cable, Solenoid/Starter Europe	27	3430-009	1	Seal, High Tension Wire
11	0623-038	7	Nut w/Washer	28	3430-007	1	Cap, Spark Plug
12	0645-327	1	Boot, Terminal	29	3430-008	1	Seal, Spark Plug
13	0445-046	4	Cable, Battery/Solenoid	30	8476-620	1	Screw, Machine
	0445-055	1	Cable, Battery/Relay Europe	31	AC003-149	1	Relay, Indicator
14	0645-019	1	Boot, Terminal				

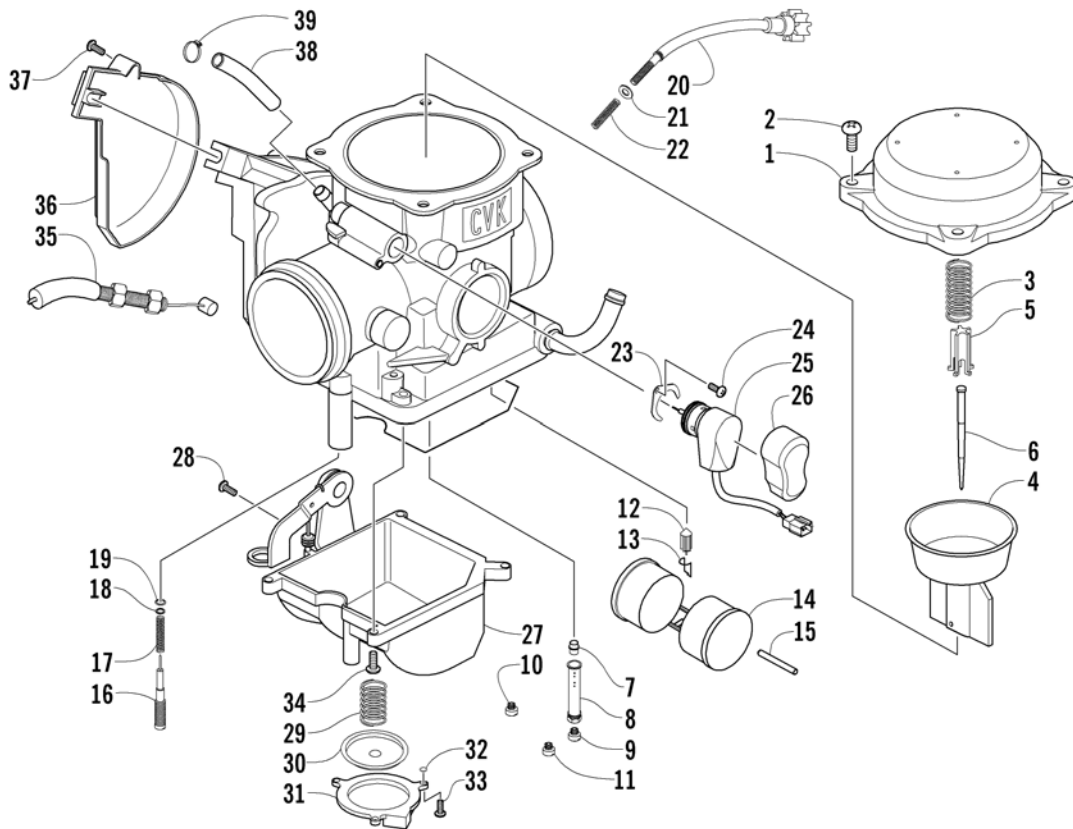


CARBURETOR

CVK34-AE (Complete Assembly p/n 0470-646)

0740-600 *Not a Service Part **Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	5507-001	1	Cover, Top	19	*	1	ø O-Ring
2	5507-002	4	Screw, Top Cover	20	5507-027	1	Screw, Idle Adjust
3	5507-066	1	Spring	21	5507-028	1	Washer
4	5507-109	1	Piston, Vacuum	22	5507-029	1	Spring
5	5507-005	1	Seat, Spring	23	5507-115	1	Plate
6	5507-110	1	Jet Needle	24	5507-117	1	Screw
7	5507-007	1	Needle Jet	25	5507-180	1	Choke, Electric
8	5507-047	1	Holder, Needle Jet	26	5507-114	1	Cover, Electric Choke
9	5507-042	1	Main Jet - 145	27	5507-181	1	Chamber, Float - Assembly (inc. 28-33)
	5507-009	1	Main Jet - 150**	28	5507-050	1	ø Screw, Drain
	5507-043	1	Main Jet - 142**	29	5507-032	1	ø Spring
	5507-044	1	Main Jet - 140**	30	5507-182	1	ø Diaphragm Assembly
	5507-086	1	Main Jet - 148**	31	*	1	ø Housing, Pump
10	5507-010	1	Slow Jet	32	5507-034	1	ø U-Ring
11	5507-097	1	Starter Jet - 75	33	5507-035	3	ø Screw
12	5507-183	1	Valve, Float - Set (inc. 13)	34	5507-017	4	Screw
13	*	1	ø Clip	35	0487-021	1	Cable, Throttle
14	5507-039	1	Float Set (inc. 15)	36	5507-036	1	Cover
15	*	1	ø Pin, Float	37	5507-037	1	Screw
16	5507-111	1	Screw, Pilot Air - Set (inc. 17-19)	38	0410-056	1	Hose, Vent
17	*	1	ø Spring	39	0423-670	1	Clamp, Hose
18	*	1	ø Washer				

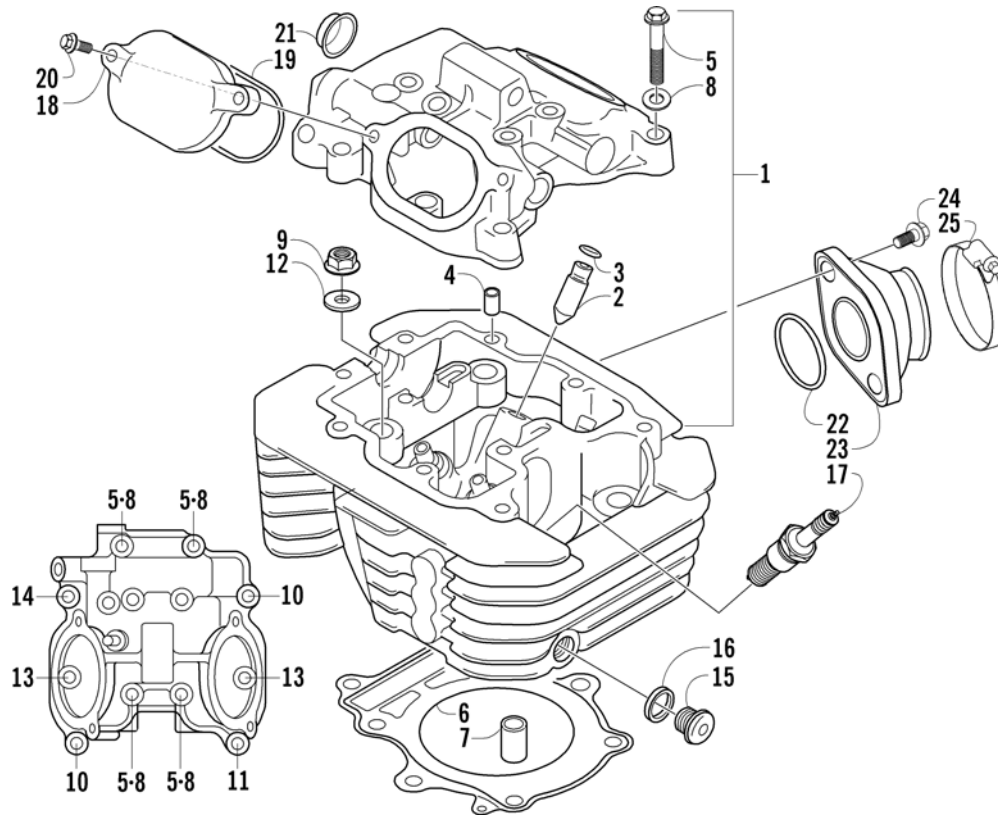

CYLINDER HEAD ASSEMBLY

0738-883 *Not Illustrated


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-576	1	Head, Cylinder - Assembly (inc. 2-5)	14	3008-376	1	Bolt, Head Cover
2	3402-099	4	∅ Guide, Valve	15	3423-453	1	Plug, Oil Gallery
3	3423-068	4	∅ Ring, Valve Guide	16	3402-011	1	Gasket, Oil Gallery Plug
4	3423-043	2	∅ Pin, Dowel	17	0217-708	1	Spark Plug (NGK CR7E)
5	3423-006	4	∅ Bolt	18	3402-100	2	Cap, Inspection
6	3402-577	1	Gasket, Cylinder Head	19	3402-101	2	O-Ring
7	3423-449	2	Pin, Dowel	20	3004-341	4	Bolt, Inspection Cap
8	3003-290	4	Gasket	21	3402-035	1	Plug, Head
9	3004-326	2	Nut, Cylinder Head	22	0470-531	1	O-Ring
10	3423-007	2	Bolt, Head Cover	23	0570-084	1	Manifold, Intake
11	3423-429	1	Bolt, Head Cover	24	8476-620	2	Screw
12	3423-439	4	Washer, Cylinder Head Nut	25	0423-317	1	Clamp
13	3004-376	2	Bolt, Head Cover	*	3402-048	1	Plug, Frost

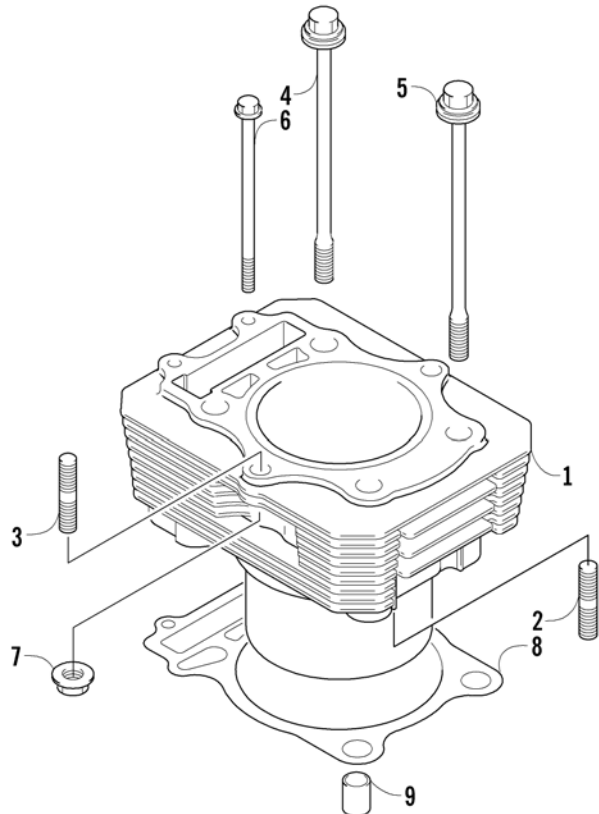

CYLINDER ASSEMBLY

0737-039


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-578	1	Cylinder	6	3423-427	2	Bolt
2	3423-384	2	Bolt, Stud	7	3004-488	2	Nut
3	3004-778	2	Bolt, Stud	8	3402-579	1	Gasket, Cylinder
4	3423-431	2	Bolt	9	3423-088	2	Pin, Dowel
5	3423-432	2	Bolt				

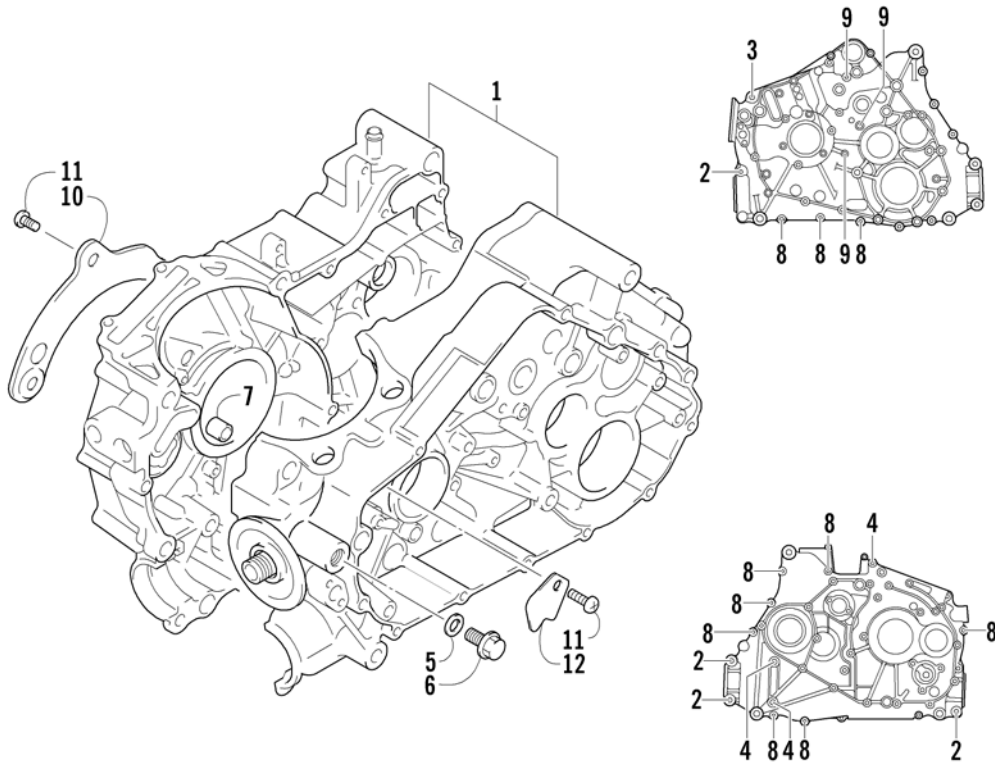

CRANKCASE ASSEMBLY

0739-843


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-580	1	Crankcase Assembly (inc. 2-9)	7	3423-088	2	∅ Pin, Dowel
2	3004-880	4	Bolt	8	3423-091	10	∅ Bolt
3	3005-332	1	∅ Bolt	9	3423-097	3	∅ Bolt
4	3005-410	3	∅ Bolt	10	3042-581	1	Plate, Oil Guide - Right
5	3402-012	1	∅ Gasket, Oil Pressure Plug	11	3004-552	4	Screw, Oil Guide Plate
6	3402-214	1	∅ Plug, Oil Pressure	12	3402-582	1	Plate, Oil Guide - Left

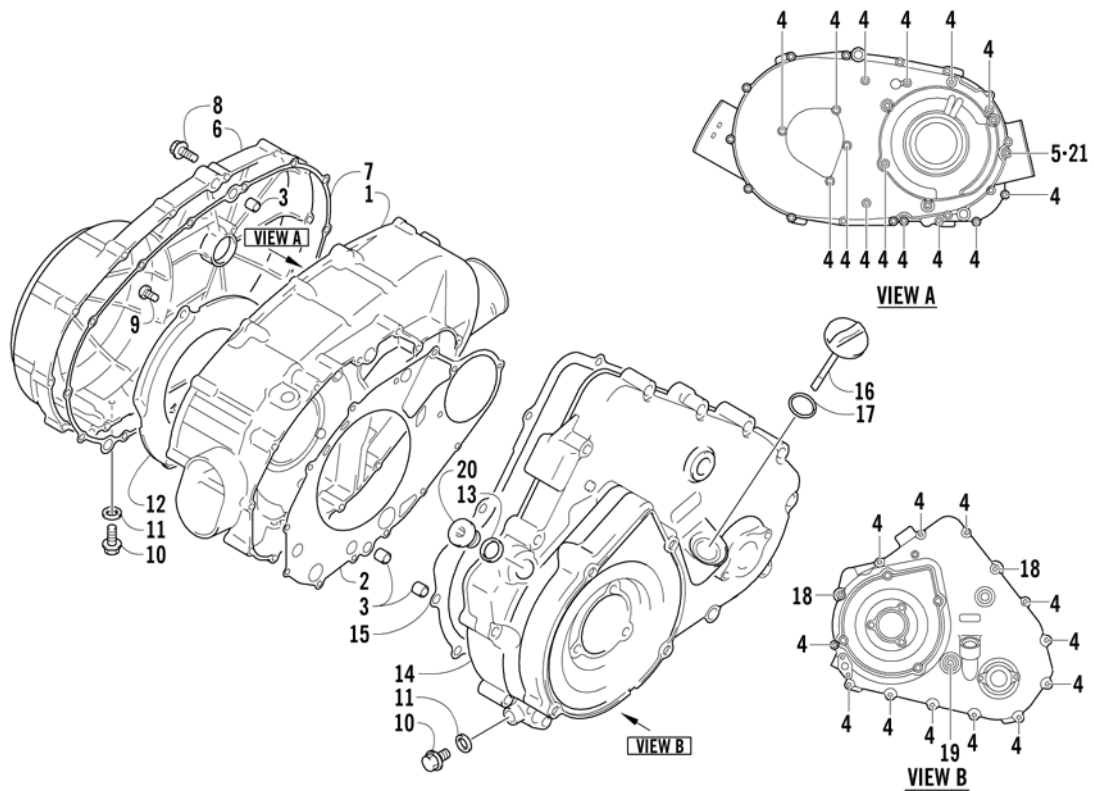

CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

0740-246


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-583	1	Cover, Clutch	12	3402-996	1	Plate, Air Intake
2	3402-589	1	Gasket	13	3402-013	1	Gasket
3	3423-088	6	Pin, Dowel	14	3402-585	1	Cover, Magneto
4	3423-098	26	Bolt	15	3402-590	1	Gasket, Magneto Cover
5	3423-392	1	Bolt	16	3402-593	1	Stick, Oil Level
6	3402-586	1	Cover, V-Belt	17	3423-055	1	O-Ring, Oil Level Stick
7	3402-591	1	Gasket, V-Belt Cover	18	3423-307	2	Bolt
8	0693-327	14	Bolt	19	3423-430	1	Bolt
9	3004-552	3	Screw	20	3423-180	1	Plug
10	3004-705	2	Plug, Drain	21	3003-290	1	Gasket
11	3402-444	2	Gasket, Drain Plug				

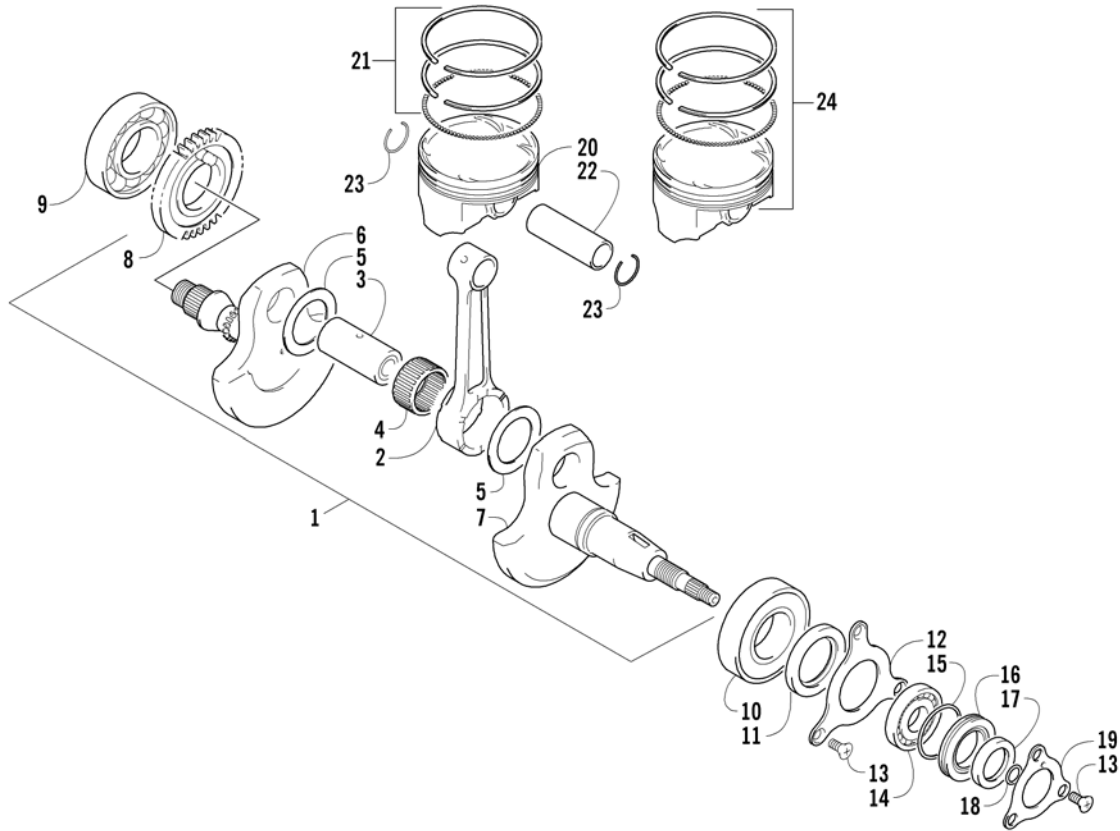

CRANKSHAFT ASSEMBLY

0740-242 *Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3403-009	1	Crankshaft Assembly (inc. 2-8)	13	3423-018	6	Screw, Retainer
2	3402-597	1	∅ Rod, Connecting	14	3402-051	1	Bearing
3	3402-599	1	∅ Pin, Crank	15	3423-063	1	O-Ring
4	3402-571	1	∅ Bearing	16	3423-542	1	Spacer
5	3423-440	2	∅ Washer	17	3402-070	1	Seal, Oil
6	3403-014	1	∅ Crankshaft - Right	18	3423-053	1	O-Ring
7	3402-601	1	∅ Crankshaft - Left	19	3402-188	1	Retainer, Crankshaft Oil Seal - Left
8	3402-698	1	∅ Gear, Crank Balancer Drive	20	3402-594	1	Piston
9	3402-055	1	Bearing - Right	21	3402-595	1	Ring, Piston - Set
10	3402-566	1	Bearing - Middle	22	3402-596	1	Pin, Piston
11	3402-573	1	Seal, Crankshaft Oil	23	3003-439	2	Circlip
12	3402-602	1	Retainer, Crankshaft Oil Seal - Middle	24	3436-015	1	Piston Set (Oversized 0.50 mm)*

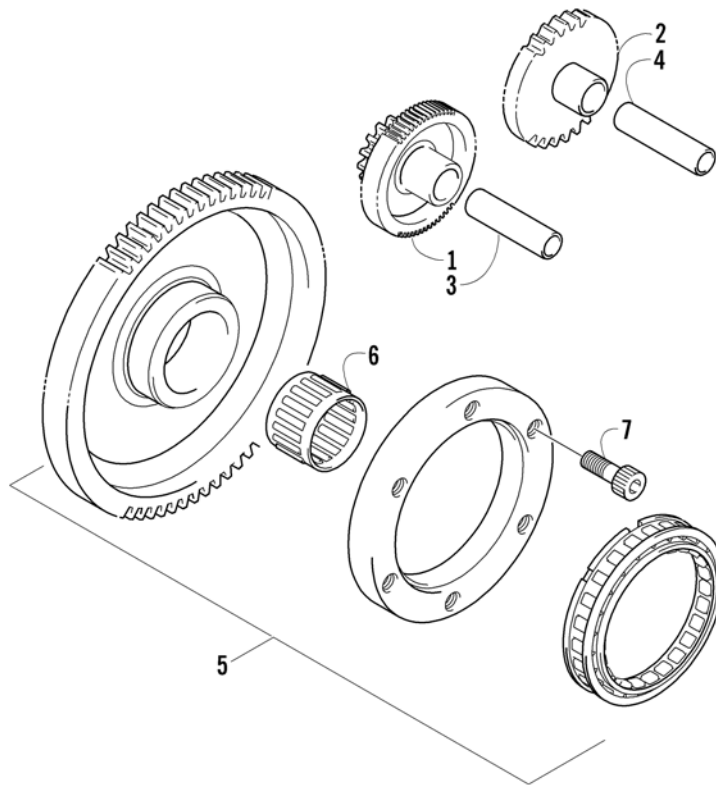

STARTER CLUTCH ASSEMBLY

0737-043


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-603	1	Gear, Starter Idler - No. 1	5	3402-690	1	Clutch, Starter - Set (inc. 6)
2	3402-124	1	Gear, Starter Idler - No. 2	6	3402-674	1	∅ Bearing
3	3423-331	1	Pin, Starter Idler Gear No. 1	7	3423-102	6	Bolt
4	3423-397	1	Pin, Starter Idler Gear No. 2				

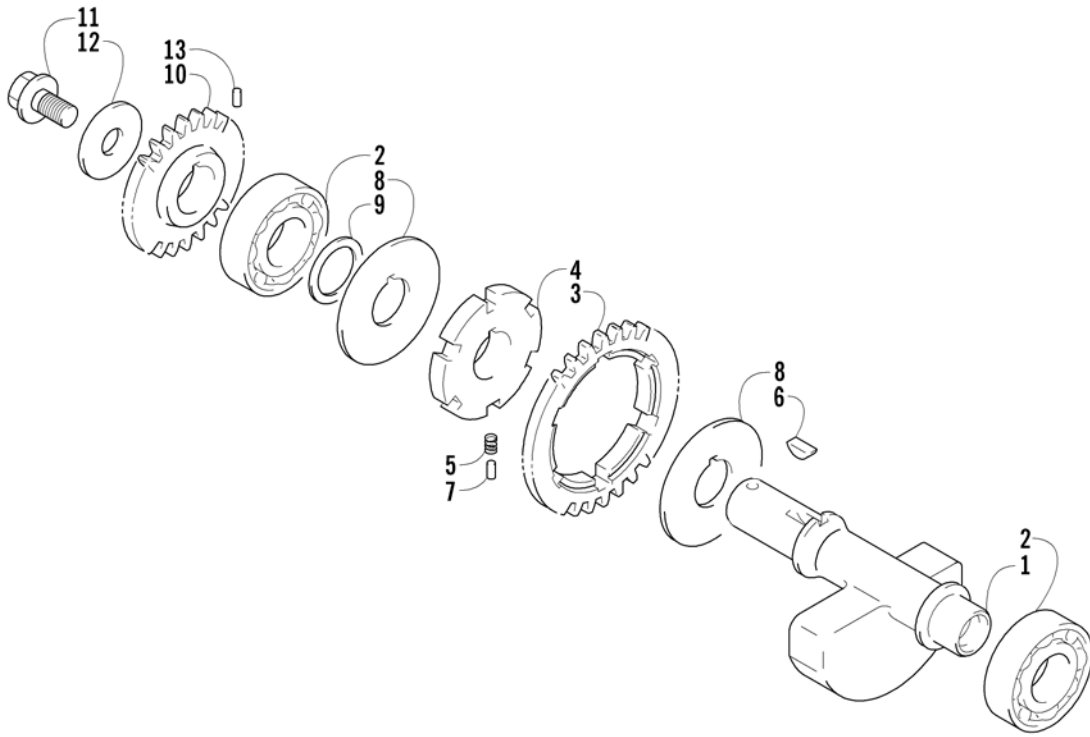

CRANK BALANCER ASSEMBLY

0737-050


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-605	1	Balancer, Crank	8	3423-441	2	Washer, Driven Gear
2	3402-553	2	Bearing	9	3423-446	1	Washer
3	3402-772	1	Gear, Driven	10	3402-617	1	Gear, Oil Pump Drive
4	3402-608	1	Race, Driven Gear	11	3423-555	1	Bolt, Drive Gear
5	3402-090	2	Spring, Driven Gear	12	3423-401	1	Washer, Drive Gear
6	3004-540	1	Key	13	3423-110	1	Pin, Drive Gear
7	3423-106	3	Pin, Driven Gear				

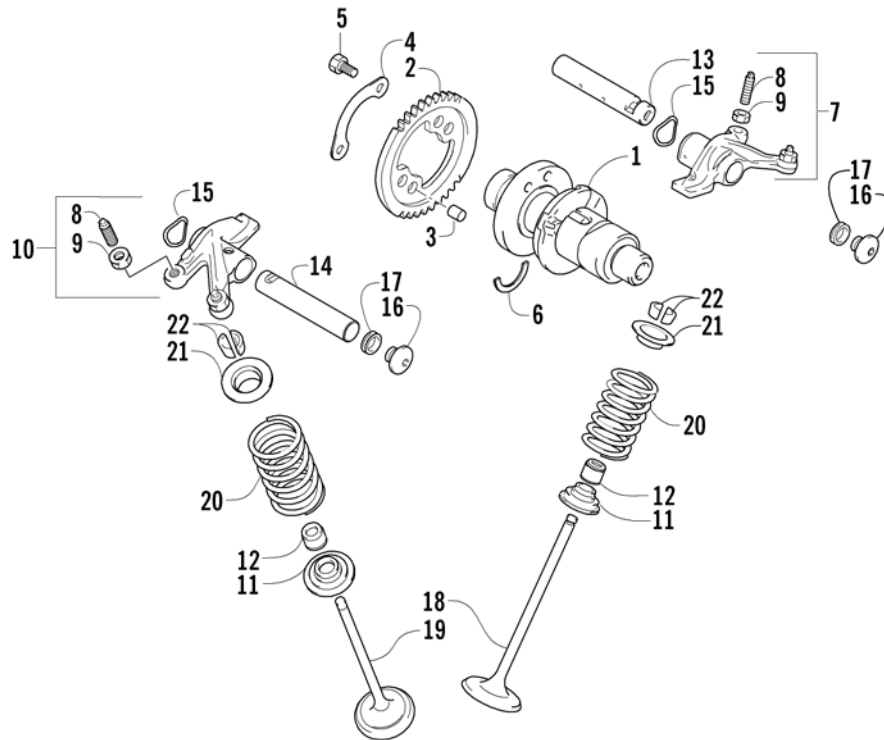

CAMSHAFT/VALVE ASSEMBLY

0739-847


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-989	1	Camshaft	11	3402-148	4	Seat, Spring
2	3402-611	1	Sprocket	12	3402-078	4	Seal, Oil
3	3423-047	1	Pin	13	3402-140	1	Shaft, Rocker Arm
4	3423-073	1	Washer	14	3402-141	1	Shaft, Rocker Arm
5	3423-013	2	Bolt	15	3423-031	2	Washer
6	3423-071	1	C-Ring	16	3402-040	2	Plug, Shaft
7	3402-805	1	Arm, Valve Rocker - Intake (inc. two No. 8-9)	17	3402-012	2	Gasket
8	3423-075	4	ø Screw	18	3402-725	2	Valve, Intake
9	3423-076	4	ø Nut	19	3402-143	2	Valve, Exhaust
10	3402-139	1	Arm, Valve Rocker - Exhaust (inc. two No. 8-9)	20	3402-726	4	Spring, Valve
				21	3402-541	4	Retainer, Spring
				22	3402-147	8	Cotter, Valve

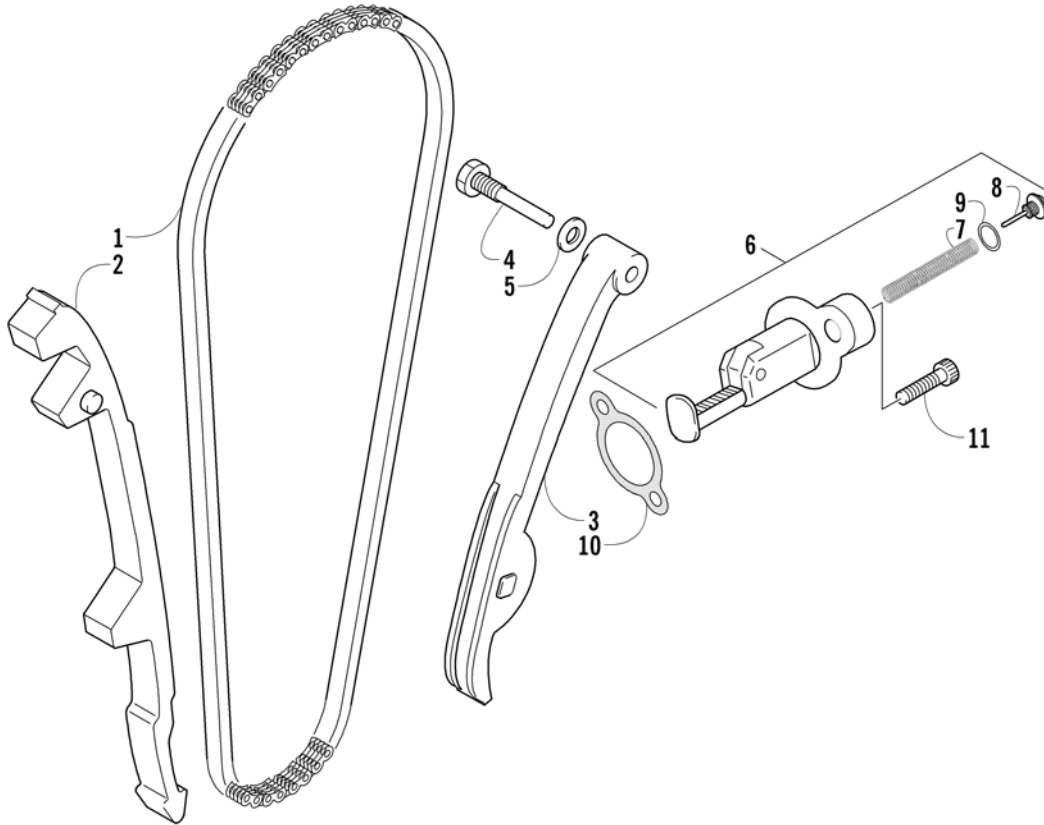

CAM CHAIN ASSEMBLY

0737-051


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-281	1	Chain, Cam	7	3423-484	1	ø Spring
2	3402-612	1	Guide, Cam Chain	8	3423-485	1	ø Plug
3	3402-613	1	Tensioner, Cam Chain	9	3423-286	1	ø O-Ring
4	3423-074	1	Bolt	10	3403-020	1	Gasket, Adjuster
5	3402-436	1	Washer	11	3004-512	2	Bolt
6	3402-614	1	Adjuster, Tensioner - Assembly (inc. 7-9)				

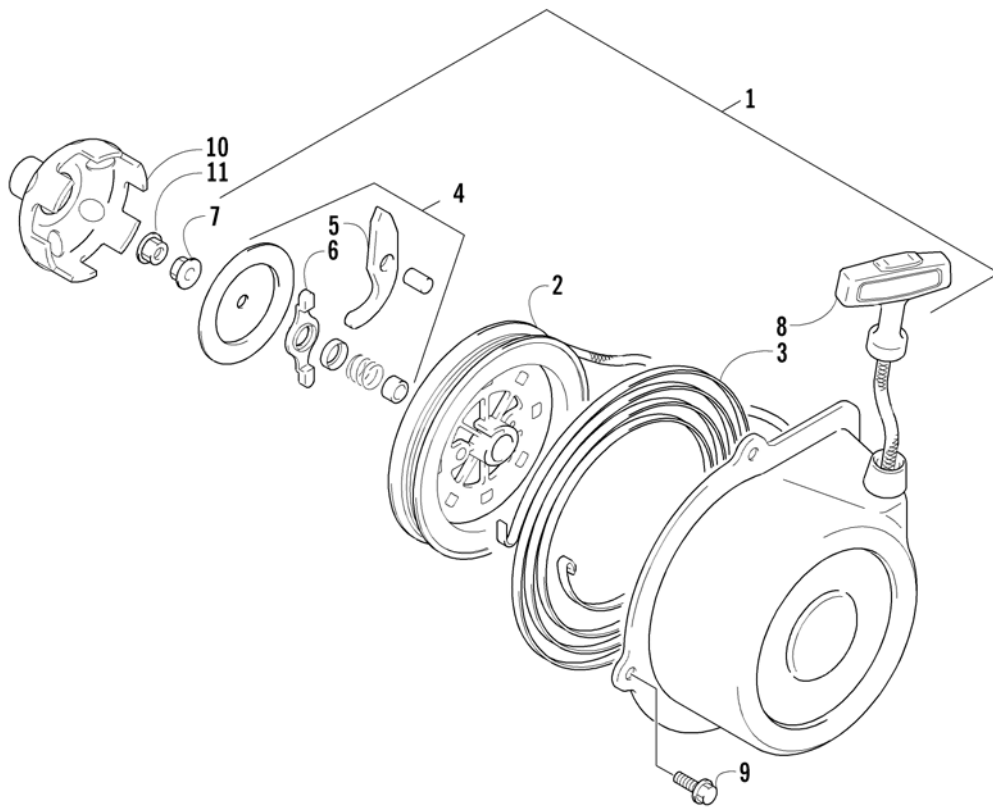

RECOIL STARTER ASSEMBLY

0737-034


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3445-003	1	Starter, Recoil - Assembly (inc. 2-8)	7	3004-488	1	ø Nut
2	3445-004	1	ø Reel	8	3445-011	1	ø Rope Assembly
3	3445-007	1	ø Spring, Spiral	9	3423-428	4	Screw, Cap
4	3445-016	1	ø Ratchet - Assembly (inc. 5-6)	10	3445-029	1	Cup, Starter
5	3445-005	1	ø ø Ratchet	11	3004-491	1	Nut
6	3445-006	1	ø ø Guide, Ratchet				

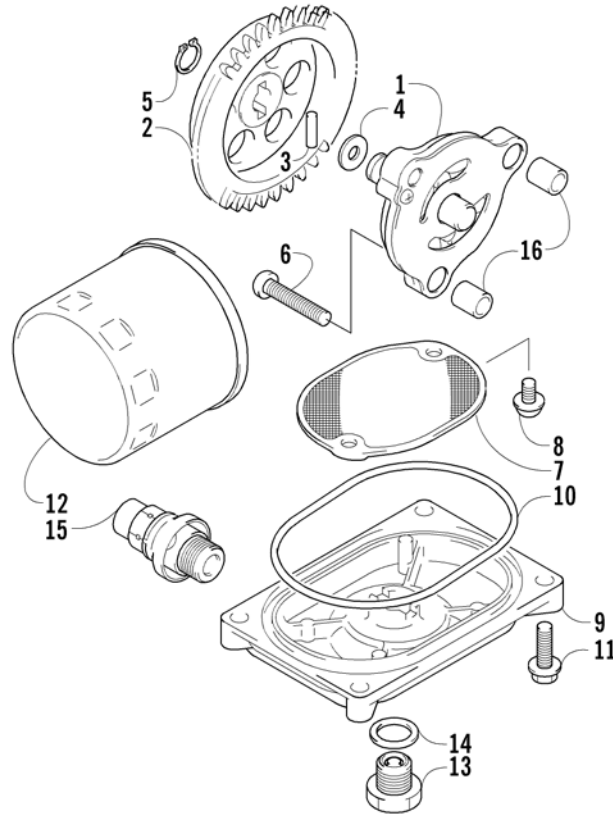

OIL FILTER/PUMP ASSEMBLY

0737-035


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-619	1	Pump, Oil	9	3402-157	1	Cap, Oil Strainer
2	3402-618	1	Gear, Driven	10	3423-077	1	O-Ring
3	3423-046	1	Pin	11	3004-756	4	Screw, Cap
4	3423-443	1	Washer	12	0812-005	1	Filter, Oil
5	3423-184	1	Circlip	13	3403-021	1	Plug, Drain
6	3423-113	3	Screw	14	3402-012	1	Gasket, Drain Plug
7	3402-156	1	Strainer, Oil	15	3402-773	1	Valve, Oil Relief - Assembly
8	0693-389	2	Screw	16	3005-206	2	Pin, Oil Pump

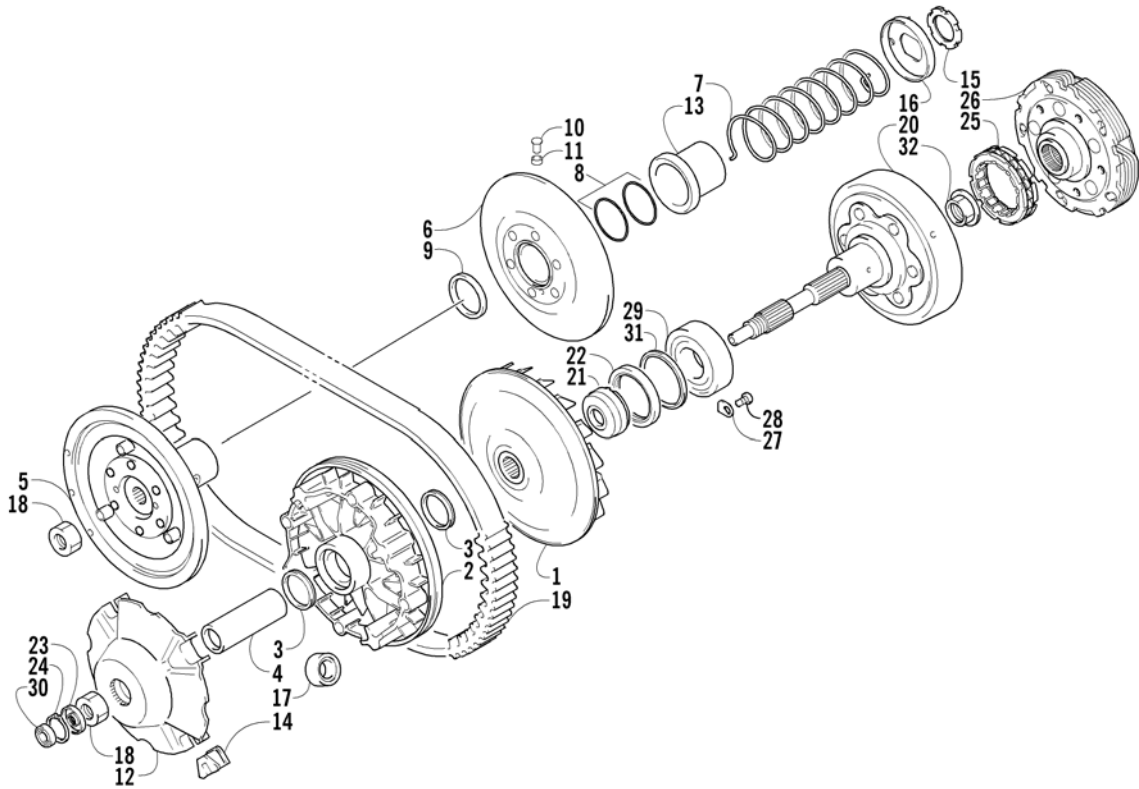

TRANSMISSION ASSEMBLY

0737-052


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-622	1	Face, Fixed Drive	17	3402-633	8	Roller, Movable Drive Face
2	3402-623	1	Face, Movable Drive	18	3423-437	2	Nut
3	3402-624	2	Seal, Movable Drive Face	19	3402-664	1	V-Belt
4	3402-625	1	Spacer, Movable Drive Face	20	3402-620	1	Housing, Clutch
5	3402-626	1	Face, Fixed Driven	21	3402-621	1	Spacer, Fixed Drive Face
6	3402-627	1	Face, Movable Driven	22	3402-977	1	Seal, Clutch Housing
7	3423-486	1	Spring, Movable Driven Face	23	3402-574	1	Seal, Clutch Housing
8	3423-487	2	O-Ring, Movable Driven Face	24	3423-505	1	Circlip
9	3402-629	2	Seal, Movable Driven Face	25	3446-003	1	Clutch, One-Way
10	3402-477	3	Pin, Movable Driven Face	26	3446-354	1	Shoe, Clutch - Assembly
11	3402-478	3	Spacer, Movable Driven Face	27	3446-031	2	Retainer, Bearing
12	3402-630	1	Plate, Movable Drive Face	28	3423-435	2	Screw, Bearing Retainer
13	3402-631	1	Sleeve, Movable Driven Face	29	3402-567	1	Bearing
14	3402-481	4	Damper, Movable Drive Face	30	3402-693	1	Bearing
15	3423-489	1	Nut, Driven Pulley	31	3423-353	1	O-Ring
16	3402-632	1	Holder, Movable Driven Face Spring	32	3423-501	1	Nut

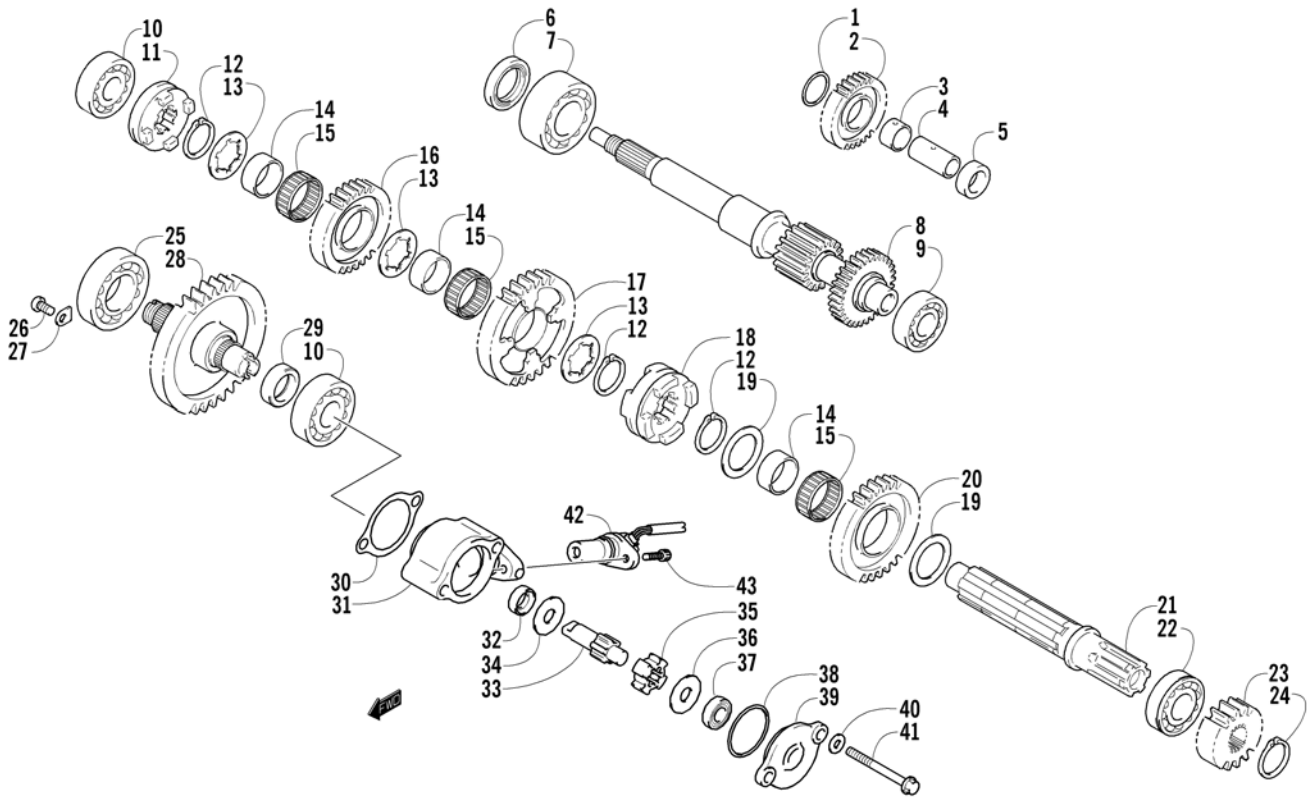

SECONDARY TRANSMISSION ASSEMBLY

0739-848


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-195	2	Washer, Reverse Idle Gear	23	3402-669	1	Gear, Drive - No. 2
2	3402-503	1	Gear, Reverse Idle	24	3423-191	1	Circlip
3	3446-103	1	Bushing, Reverse Idle Gear	25	3402-055	1	Bearing, Output Shaft
4	3402-634	1	Shaft, Reverse Idle	26	3423-370	2	Screw, Bearing Retainer
5	3423-442	1	Spacer, Reverse Idle Gear	27	3446-031	2	Retainer, Bearing
6	3402-537	1	Seal, Driveshaft	28	3402-666	1	Shaft, Output
7	3402-499	1	Bearing, Driveshaft	29	3423-494	1	Spacer, Output Shaft
8	3402-665	1	Driveshaft	30	3446-244	1	Gasket, Housing
9	3003-261	1	Bearing, Driveshaft - Left	31	3446-400	1	Housing, Speedometer Sensor
10	3402-045	2	Bearing, Shaft	32	3006-322	1	Seal, Shaft
11	3402-636	1	Dog, Reverse Driven Gear	33	3446-402	1	Shaft, Output
12	3423-066	3	Circlip	34	3423-617	1	Washer
13	3423-263	3	Washer	35	3402-837	1	Rotor
14	3402-494	3	Bushing	36	3423-767	1	Washer
15	3402-498	3	Bearing	37	3402-980	1	Bearing
16	3402-635	1	Gear, Reverse Driven	38	3423-766	1	O-Ring
17	3402-668	1	Gear, Driven - Low	39	3446-401	1	Cover, Speedometer Sensor Housing
18	3402-496	1	Dog, Sliding	40	3003-290	2	Gasket
19	3423-448	2	Washer	41	3423-307	2	Bolt
20	3402-495	1	Gear, Driven - High	42	3402-981	1	Sensor, Speedometer
21	3402-667	1	Countershaft	43	3423-226	1	Bolt
22	3004-209	1	Bearing, Shaft				

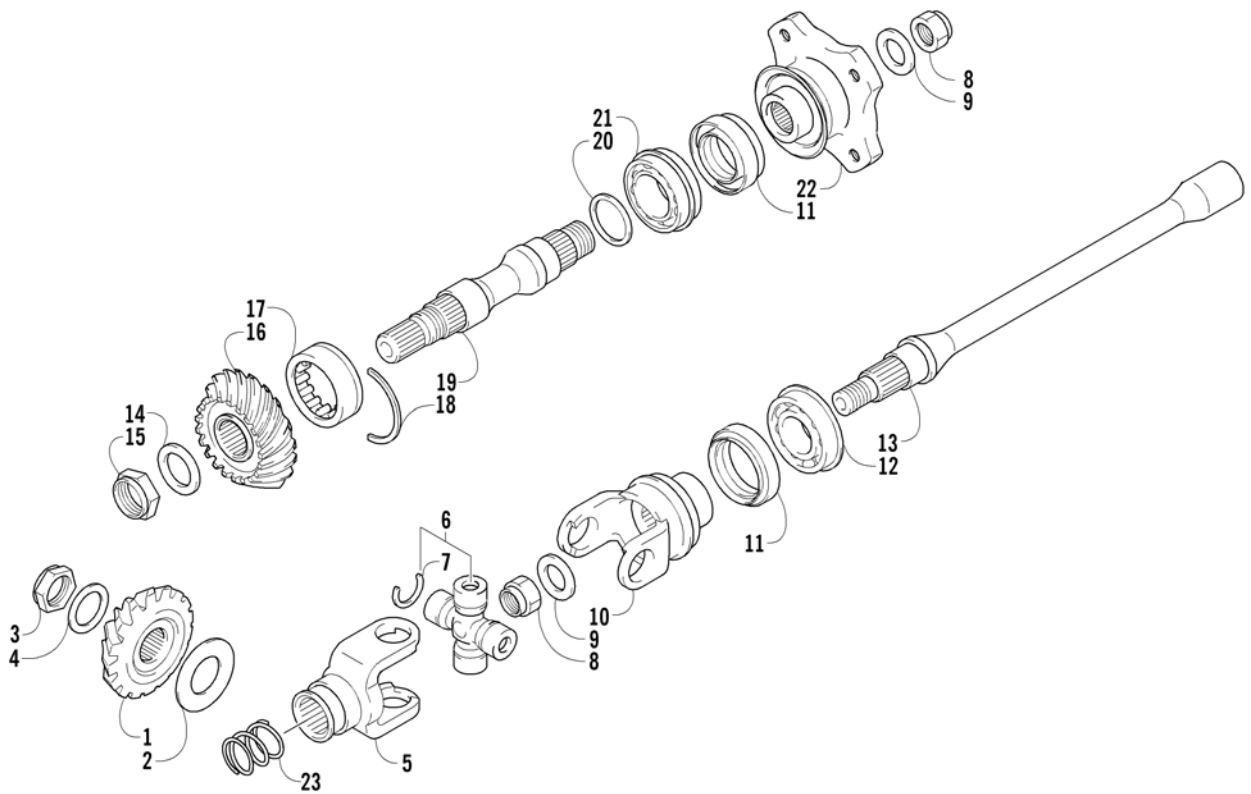

SECONDARY DRIVE ASSEMBLY

0740-752


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-637	1	Gear, Secondary Drive	19	3402-639	1	Shaft, Secondary Driven - Rear
2	3446-035	1	Shim, Secondary Drive Gear - Set	20	3402-017	AR	Shim, 25 x 34 x 0.60 mm
3	3423-023	1	Nut		3402-018	AR	Shim, 25 x 34 x 0.65 mm
4	3005-372	1	Washer		3402-019	AR	Shim, 25 x 34 x 0.70 mm
5	3446-327	1	Yoke, Propeller Shaft		3402-020	AR	Shim, 25 x 34 x 0.75 mm
6	3402-562	1	Joint, Universal - Set (inc. 7)		3402-021	AR	Shim, 25 x 34 x 0.80 mm
7	3423-479	4	ø Circlip		3402-022	AR	Shim, 25 x 34 x 0.85 mm
8	3423-025	2	Nut		3402-023	AR	Shim, 25 x 34 x 0.90 mm
9	3423-028	1	Washer		3402-024	AR	Shim, 25 x 34 x 0.95 mm
10	3402-742	1	Yoke, Drive Output - Front		3402-025	AR	Shim, 25 x 34 x 1.00 mm
11	3402-072	2	Seal, Oil		3402-028	AR	Shim, 25 x 34 x 1.05 mm
12	3402-558	1	Bearing, Front Secondary Driven Shaft		3402-029	AR	Shim, 25 x 34 x 1.10 mm
13	3402-694	1	Shaft, Secondary Driven - Front		3402-030	AR	Shim, 25 x 34 x 1.15 mm
14	3423-137	1	Washer, Secondary Driven Gear		3402-031	AR	Shim, 25 x 34 x 1.20 mm
15	3423-136	1	Nut, Secondary Driven Gear	21	3402-067	1	Bearing, Rear Secondary Driven Shaft
16	3402-638	1	Gear, Secondary Driven	22	3402-514	1	Flange, Output Joint - Rear
17	3402-515	1	Bearing, Driven Gear	23	1402-026	1	Spring
18	3423-072	1	C-Ring, Driven Bearing				

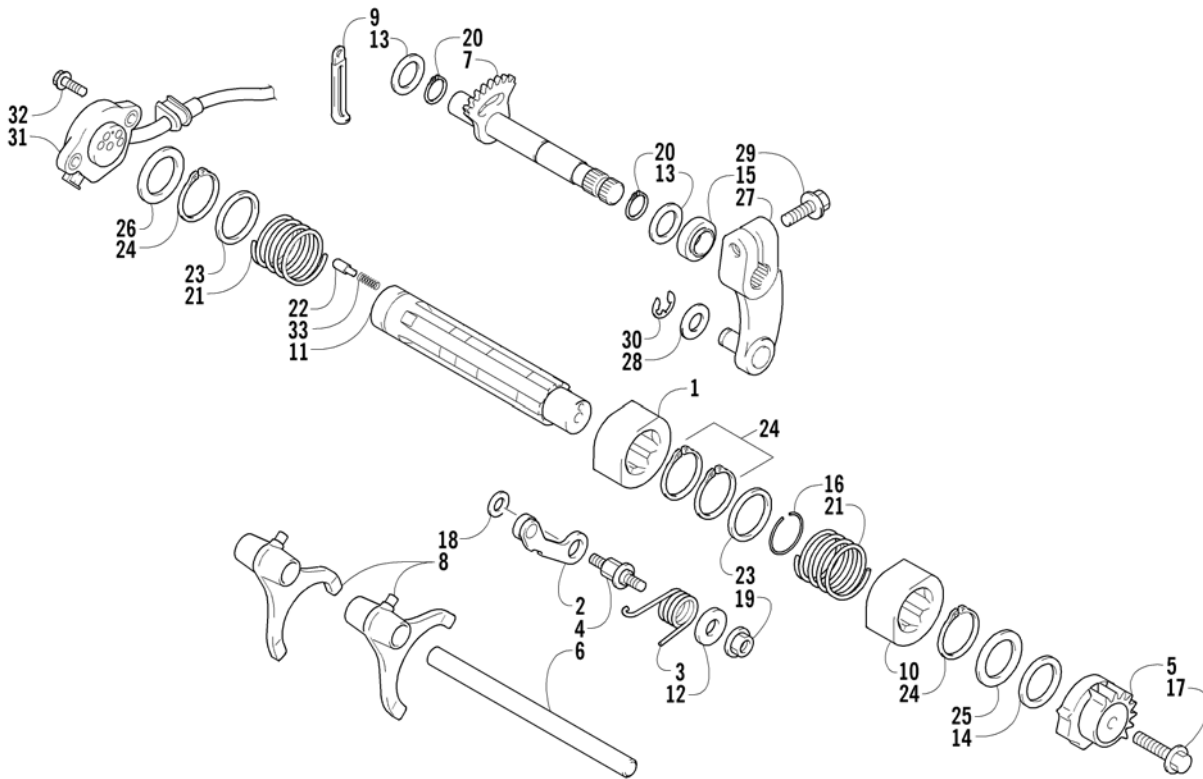

GEAR SHIFTING ASSEMBLY

0737-055


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3402-640	1	Cam, Reverse	18	3423-141	1	Washer, Cam Stopper
2	3446-043	1	Stopper, Cam	19	3004-488	1	Nut, Cam Stopper Spring
3	3446-283	1	Spring, Cam Stopper	20	3423-358	2	Circlip, Sub-Gear Shift Shaft
4	3446-048	1	Support, Cam Stopper	21	3446-280	2	Spring, Cam
5	3402-642	1	Plate, Gear Shift Cam	22	3423-044	2	Contact
6	3402-643	1	Shaft, Shift Fork	23	3402-382	2	Washer, Cam Spring
7	3402-644	1	Shaft, Sub-Gear Shift	24	3423-191	4	Circlip, Cam Spring
8	3446-073	2	Fork, Shift	25	3402-195	1	Washer, Shift Shaft
9	3004-787	1	Clamp, Wire	26	3423-421	1	Washer, Shift Shaft
10	3402-670	1	Cam, Gear Shift	27	3402-434	1	Arm, Select
11	3446-281	1	Shaft, Gear Shift	28	3423-204	1	Washer, Select Arm
12	3423-438	1	Washer, Cam Stopper Spring	29	3004-341	1	Bolt, Select Arm
13	1691-043	2	Washer, Sub-Gear Shift Shaft	30	3423-153	1	E-Ring
14	3423-446	1	Washer, Gear Shift Cam Plate	31	3402-997	1	Base, Gear Shift - Assembly
15	3402-076	1	Seal, Sub-Gear Shift Shaft	32	3423-418	2	Bolt
16	3423-416	1	C-Ring, Cam	33	3402-087	2	Spring
17	3004-376	1	Bolt, Gear Shift Cam Plate				

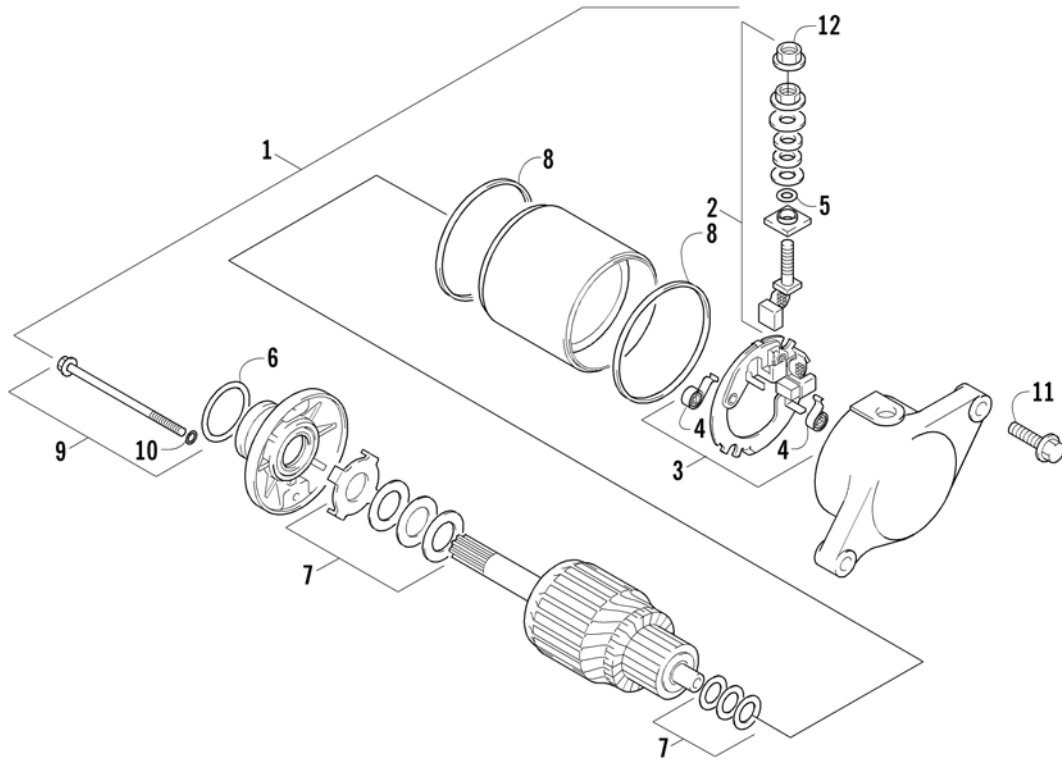

STARTER MOTOR ASSEMBLY

0737-056


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3545-016	1	Motor, Starter - Assembly (inc. 2-10)	7	3008-099	1	∅ Washer Set
2	3402-671	1	∅ Terminal Set, Brush	8	3423-497	2	∅ O-Ring
3	3402-672	1	∅ Holder Set, Brush (inc. 4)	9	3423-498	2	∅ Through-Bolt (inc. 10)
4	3008-551	4	∅ ∅ Spring, Brush	10	3423-496	2	∅ ∅ O-Ring
5	3008-164	1	∅ O-Ring	11	3004-756	2	Bolt
6	3423-272	1	∅ O-Ring	12	3423-195	1	Nut

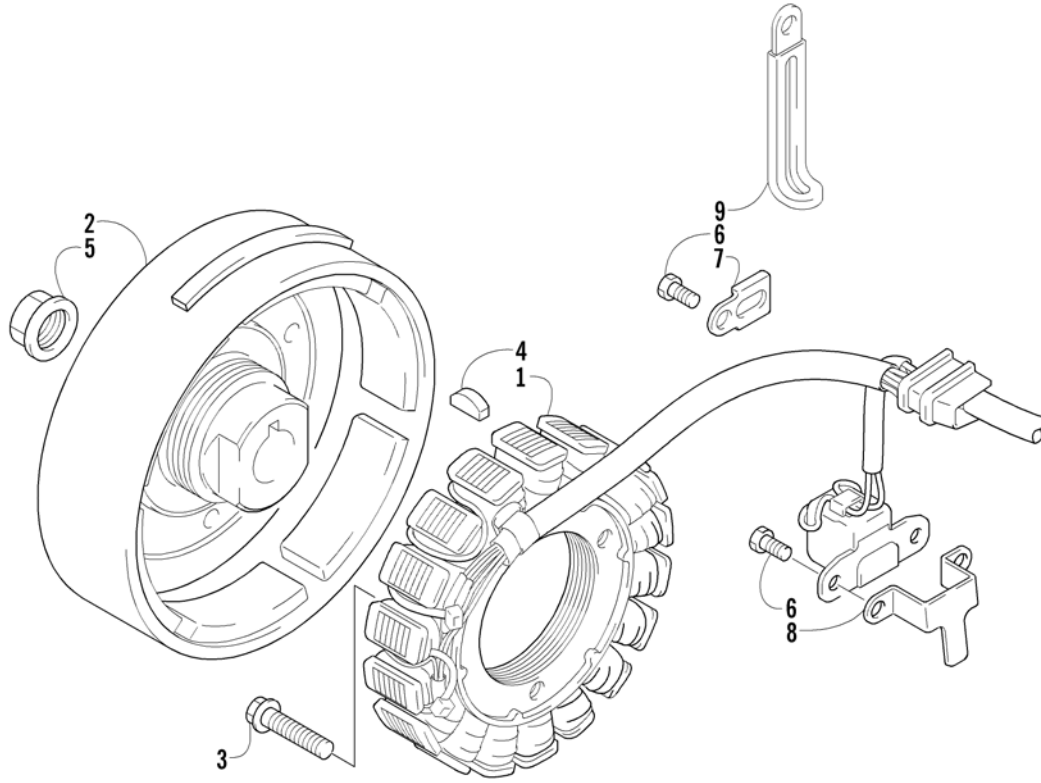

MAGNETO ASSEMBLY

0737-033


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3430-053	1	Stator Assembly	6	3423-005	3	Bolt
2	3430-054	1	Rotor/Flywheel	7	3430-006	1	Clamp
3	3004-756	3	Bolt	8	3430-005	1	Clamp
4	0691-785	1	Key	9	3002-964	1	Clamp, Wire
5	3423-086	1	Nut				

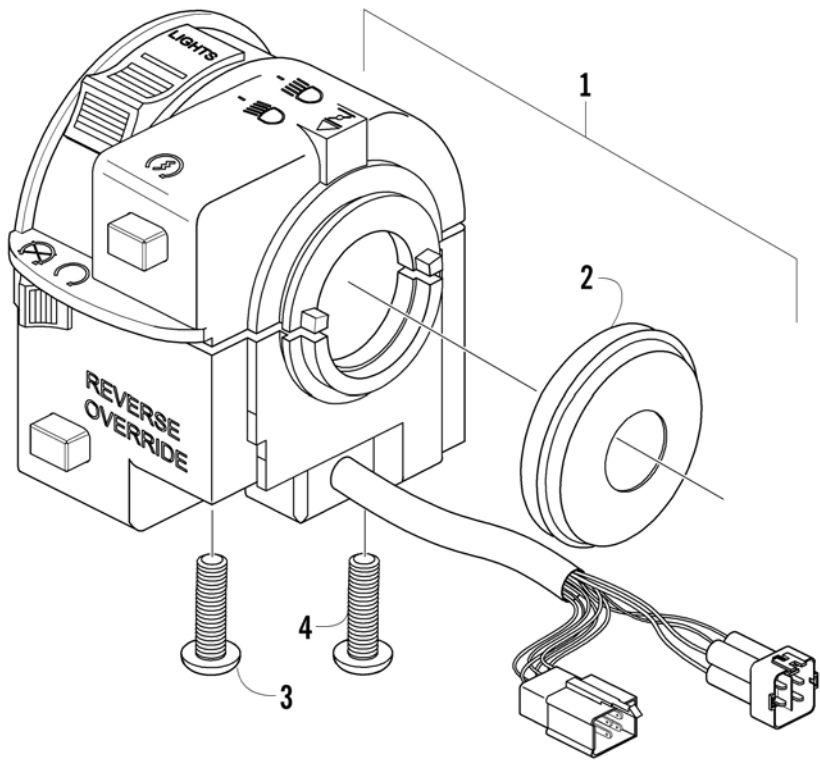

CONTROL SWITCH HOUSING ASSEMBLY

0738-459

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0509-014	4	Switch, Control—Assembly (inc. 2-4)	3	0409-028	1	∅ Screw
	0409-081	1	Switch, Control Assy. Europe 06	4	0409-027	1	∅ Screw
2	3409-019	1	∅ Cover, Choke Lever				

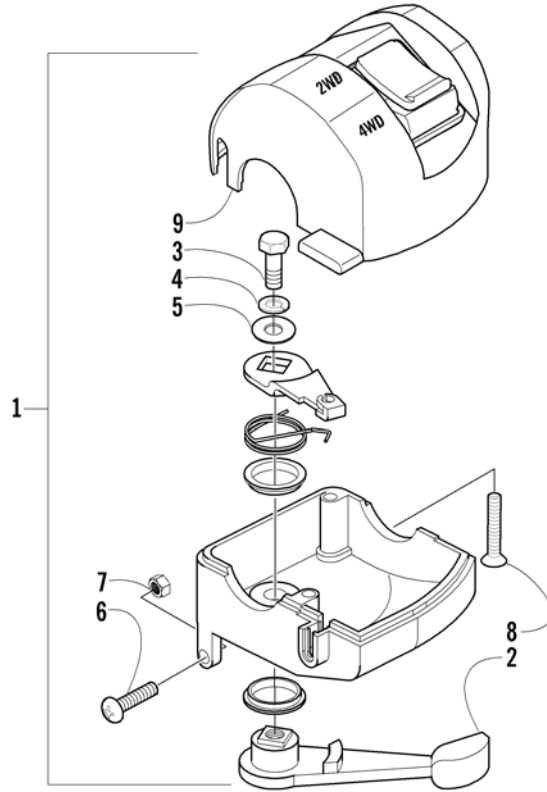

THROTTLE CASE ASSEMBLY

0738-414

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0509-012	1	Case, Throttle - Assembly (inc. 2-9)	6	3423-014	1	∅ Screw
2	3409-001	1	∅ Lever	7	3423-327	1	∅ Nut
3	3004-533	1	∅ Screw, Cap	8	3423-199	2	∅ Screw
4	3004-447	1	∅ Washer, Lock	9	0409-048	1	∅ Cover, Throttle Case w/Switch
5	3003-030	1	∅ Washer				

RELATED ITEMS

2006 400 3in1

0436-660	Bag, Rack, Front, Black	2257-300	Manual, Operator's (E)
0436-480	Bar, Utility	2257-314	Manuel d'utilisation (F)
0436-619	Brush Guard/Bumper - Deluxe	0652-024	Paint, Metal - Black
0436-757	Bumper - Rear	0436-635	Plow Attachment Kit
0436-827	Cargo Box	0436-228	Plow Blade, 50 in. - Straight
0436-459	Carryall (9 x 12)	0436-287	Plow Blade, 50 in. - One-Way
0436-460	Carryall (11 x 17)	0436-296	Plow Blade, 60 in. - Straight
0436-462	Carryall (10 D)	0436-360	Plow Blade, 60 in. - One-Way
0436-477	Cord Reel	0436-636	Plow, Push Frame
0436-726	Cover, Trailerable	0436-626	Rack Basket
0436-087	Electrical Plug	0436-798	Rack - Rear
0436-035	Engine Block Heater	0436-026	Tire Chains, Size B (24 in. and 25 in. Tires)
0436-466	Fender Box	0436-027	Tire Chains, Size C (25 in. and 26 in. Tires)
0436-538	Gear Cradle	1402-028	Tire, Titan AT589 (25x8-12, Mud & Snow)
0436-501	Grease, High-Performance	0402-563	Tire, Titan AT589 (25x10-12, Mud & Snow)
0436-464	Grill Cradle	0436-656	Winch Accessories Kit
0436-828	Gun Holder - Pro-Grip	0436-655	Winch Kit, 2500 lb
0436-352	Hand/Thumb Warmers	0436-703	Windshield, Clear
0436-463	Light Bar	0436-623	Windshield, Clear w/Accent
0436-516	Light Mount, Portable - Cargo Box	0436-470	Workbase (8 in.)
0436-040	Light, Portable - Spotlight		
0436-039	Light, Portable - Work		
0436-122	Lunch Pack, Black		
2257-458	Manual, Illustrated Parts		

■ **NOTE:** For a complete list of related items, refer to the current accessory catalog.